

SEE "DETAIL A"
 16 FT SIGNAL PEDESTAL, FOUNDATION,
 FLASHER AND SIGNS
 METER/FLASHER CABINET PEDESTAL
 SOP

FACTORS	UNION	LOCATION @
1		475'
3/4		180'
7		AS SHOWN
1		AS SHOWN
1		5' & 35'
1		20' & 50'
1		475'

FROM CENTER OF STOP
 OF LOOP.


END

EXTEND



N.M.C. (SEE DETAIL PAGE 2)
 TO BE SAW CUT IN
 (SEE PROVISIONS).

POLE


POLE MOUNTED AT 0°
 WITH PUSH BUTTONS AND SIGNS
 (45T ARM (250 W HPS) WITH PEC
 BOX
 JUNCTION BOX TO HH 10

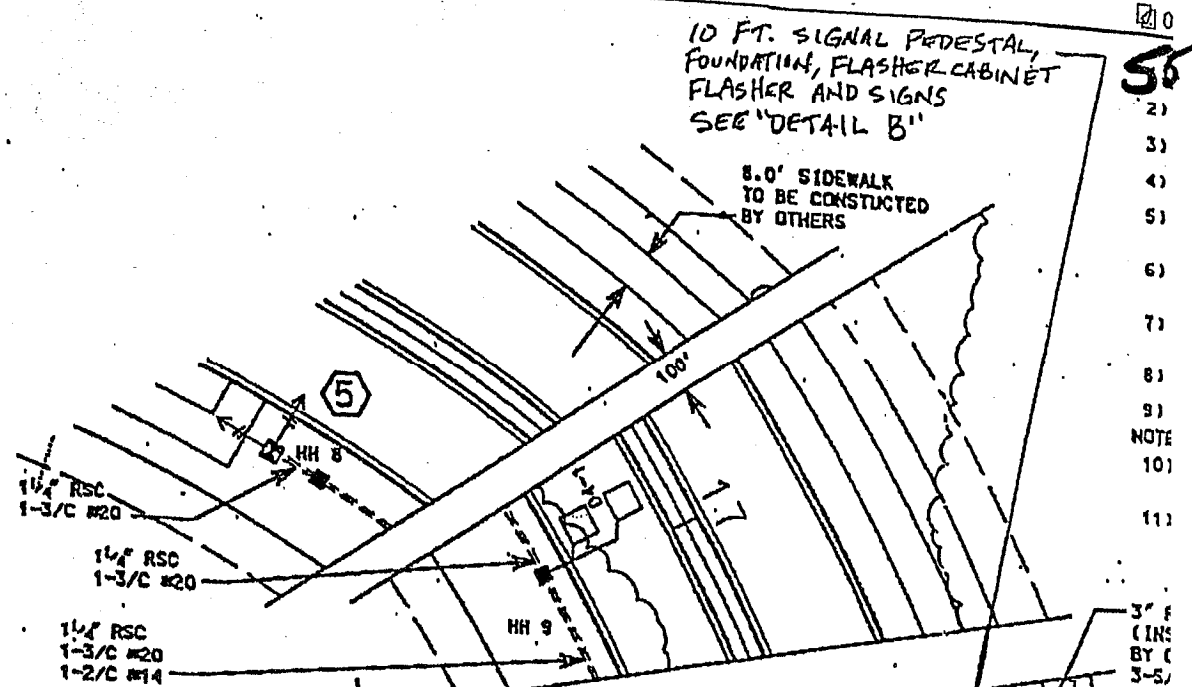

5 PEDESTAL FOUNDATION
 18" PEDESTAL POLE AND BASE
 TWO WAY EYP DETECTOR PHASE B4
 (DOUBLE TURRET - SINGLE CHANNEL)
 EXTEND TO HH 8
 1-3/4" #20

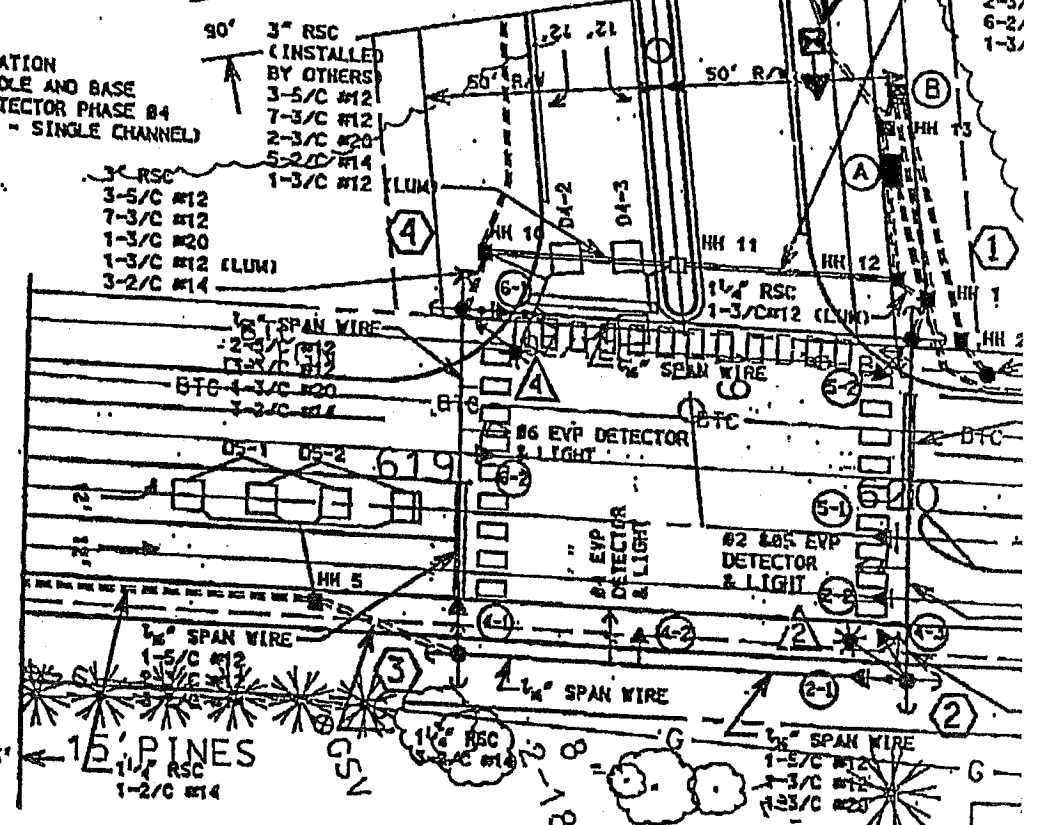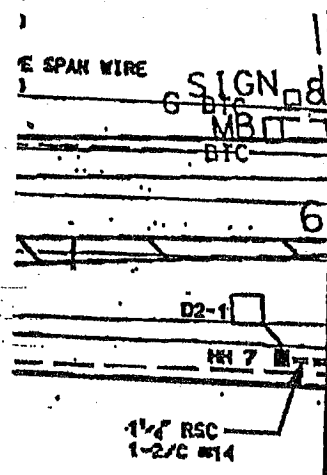

3 INSTALL 45' WOOD POLE
 2-DOWN GUYS, GUARDS AND ANCHORS
 1-TYPE 108 WOOD POLE MOUNTED AT 270°
 1-PEDESTRIAN PUSH BUTTON AND SIGN
 METAL JUNCTION BOX
 1 1/2" RSC RISER BELOW JUNCTION BOX
 3-2/C #14
 2" RSC RISER AND WEATHER HEAD ABOVE
 JUNCTION BOX
 1-5/C #12
 2-3/C #12
 3-2/C #14

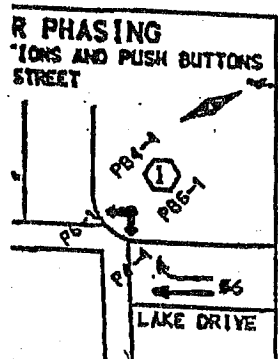

SIGNAL SYSTEM OPERATION

-THE SIGNAL SYSTEM FLASH MODE IS ALL RED.
 -NORMAL OPERATION IS 4 PHASE, WITH
 PHASE 5 BEING A PROTECTED LEFT
 TURN PHASE.

