

MAIN PANEL:171-1081-504

COBALT TS2		LEGEND		
<ul style="list-style-type: none"> ■ CONFIGURATION: L3604 ■ SOFTWARE: 32.65.30 ■ ETHERNET MODULE 		<ul style="list-style-type: none"> BIU BUS INTERFACE UNIT BU() C/C, BIU () CB() CIRCUIT BREAKER () C/C CONNECTING CABLE CCA CONTROLLER CABLE "A" CDP C/C, DR POWER CMA MMU/CMU CABLE "A" CMB MMU/CMU CABLE "B" CPO C/C PRE-EMPT OUTPUTS CPP C/C PRE-EMPT POWER DR DETECTOR RACK DS() DOOR SWITCH () FL() FLASHER () FR() FLASH XFER. RELAY LS() LOAD SWITCH MC MERCURY CONTACTOR MP MAIN PANEL PAP POWER-AUX PANEL PSP CAB. PWR. SUPPLY SA SURGE ARRESTOR TB-() TERM. BLOCK () 		
<ul style="list-style-type: none"> □ OVERLAPS <ul style="list-style-type: none"> □ IN EEPROM □ KEYBOARD ENTERED 	<div style="display: flex; align-items: center;"> <div style="margin-right: 5px;">A =</div> <div style="border-left: 1px solid black; border-right: 1px solid black; border-bottom: 1px solid black; width: 10px; height: 10px; margin-right: 5px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="margin-right: 5px;">B =</div> <div style="border-left: 1px solid black; border-right: 1px solid black; border-bottom: 1px solid black; width: 10px; height: 10px; margin-right: 5px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="margin-right: 5px;">C =</div> <div style="border-left: 1px solid black; border-right: 1px solid black; border-bottom: 1px solid black; width: 10px; height: 10px; margin-right: 5px;"></div> </div> <div style="display: flex; align-items: center;"> <div style="margin-right: 5px;">D =</div> <div style="border-left: 1px solid black; border-right: 1px solid black; border-bottom: 1px solid black; width: 10px; height: 10px; margin-right: 5px;"></div> </div>			
<ul style="list-style-type: none"> □ ANALOG TELEMETRY MOD.: 100-1005-501 ■ INTERNAL RS-232 TELEMETRY □ TEST INPUT A = □ TEST INPUT B = 				

MAIN PANEL PLUG-IN REQUIREMENTS									
BIU2 T&F	BIU3 T&F	LS9 PED 2 BEACONS	LS10 PED 4 BEACONS	LS11 PED 6 BEACONS	LS12 PED 8 BEACONS	LS13 OL "A"	LS14 OL "B"	LS15 OL "C"	LS16 OL "D"
BIU1 T&F	LS1 VEH 1	LS2 VEH 2	LS3 VEH 3	LS4 VEH 4	LS5 VEH 5	LS6 VEH 6	LS7 VEH 7	LS8 VEH 8	FL1 □1CKT ■2CKT
FR1 L R V1 V5	FR2 L R V2 V6	FR3 L R V3 V7	FR4 L R V4 V8	⊗FR5 L R A C	⊗FR6 L R B D	K1 LS 24V CONT.			


■ DENOTES TYPE OF OPERATION AND/OR WHERE PLUG-IN IS REQUIRED. L = LEFT, R = RIGHT.
 ⊗ DENOTES WHERE "UNUSED RED" JUMPER PART NUMBER 32448G1 IS REQUIRED. INSTALL BETWEEN PINS 1 & 3 FOR LOAD SWITCH OR PINS 6 & 8 AND 5 & 7 FOR FLASH TRANSFER RELAY.

FLASH:
 □ ø2&6 YELLOW, ALL OTHERS RED.
 ■ ALL RED.
 ■ RELAYS DE-ENERGIZED FOR FLASH.
 □ RELAYS ENERGIZED FOR FLASH.

FLASHER	
PIN	FUNCTION
7	CIRCUIT #1
8	CIRCUIT #2
9	CHASSIS GND
10	AC COMMON
11	115 VAC
12	-----

LOAD SWITCH	
PIN	FUNCTION
1	115 VAC
2	CHASSIS GND
3	RED/DW OUTPUT
4	-----
5	YEL OUTPUT
6	RED/DW INPUT
7	GRN/W OUTPUT
8	YEL INPUT
9	+24 VDC
10	GRN/W INPUT
11	AC COMMON
12	-----

①
2.2K
10W

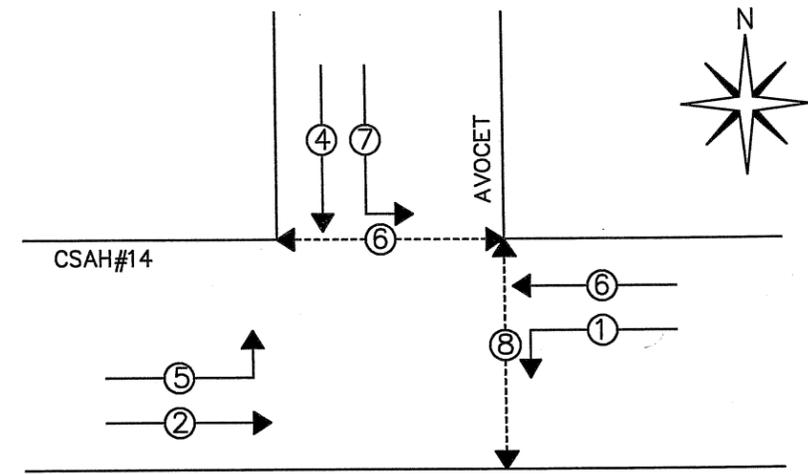

SHEET 1 OF 9

3 USE ONLY COPPER CONDUCTORS FOR FIELD AND SERVICE CONNECTIONS.






2 CONNECT A.C. SERVICE TO TERMINAL BLOCK 501 (LINE), 502 (NEUTRAL) AND GB2 (EARTH) ON RIGHT SIDEWALL OF CABINET.

① INSTALL 2.2K, 10 WATT LOAD RESISTORS BETWEEN PINS 7 AND 11 ON LOAD SWITCHES 9, 10, 11 & 12.

NOTES: UNLESS SPECIFIED OTHERWISE

DESIGNER G.V. T.C.C.	DATE 02/22/2018	ECONOLITE CONTROL PRODUCTS INC.	TRAFFIC CONTROL CORPORATION	780 W. BELDEN SUITE D ADDISON, IL 60101
DRAWN CM TCC	02/22/2018			CABINET SPECIFICATION: TS2TYPE1 ANOKA COUNTY SPEC PLUG AND GO
CABINET SIZE	77"	CUSTOMER: X		
INSPECTED		INTERSECTION: CSAH#14 AT AVOCET		
APPROVED		LOCATION: X		
CUSTOMER P.O.		SYSTEM: X		
	INSTALLED BY	SALES ORDER NO.	SIZE B	DRAWING #TS2AC16PG-

CONTROLLER
FLASHER
SW.PACKS

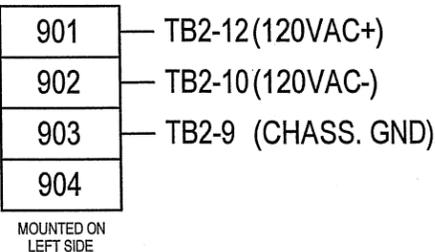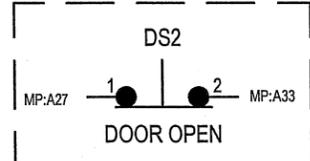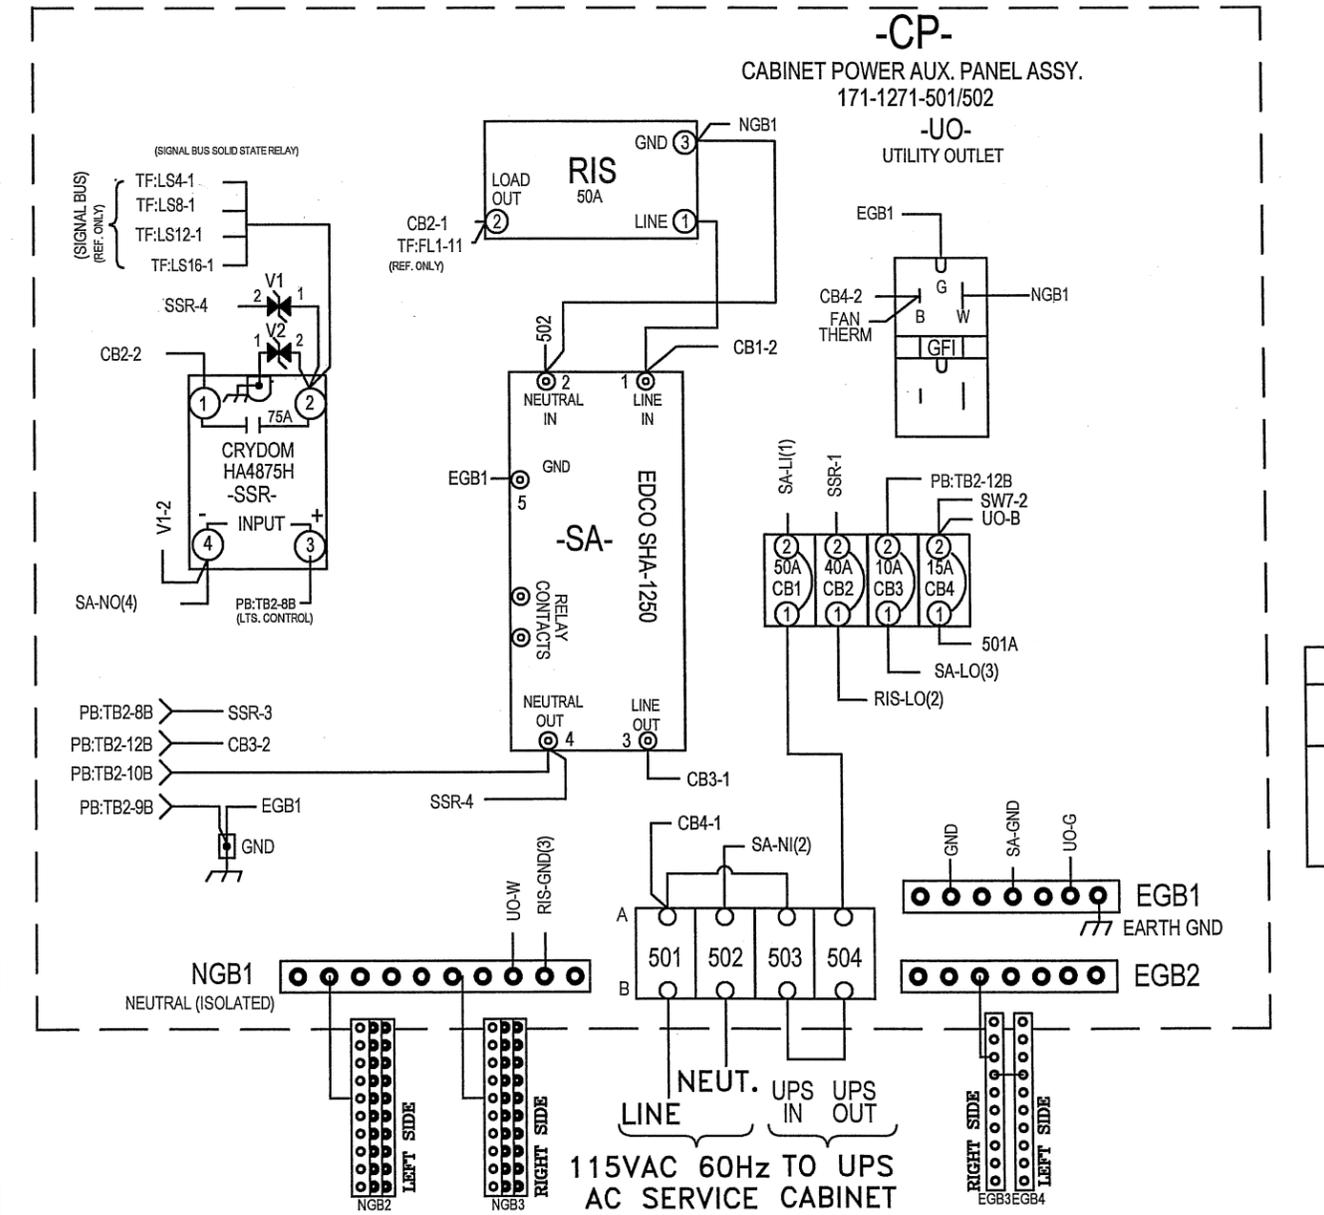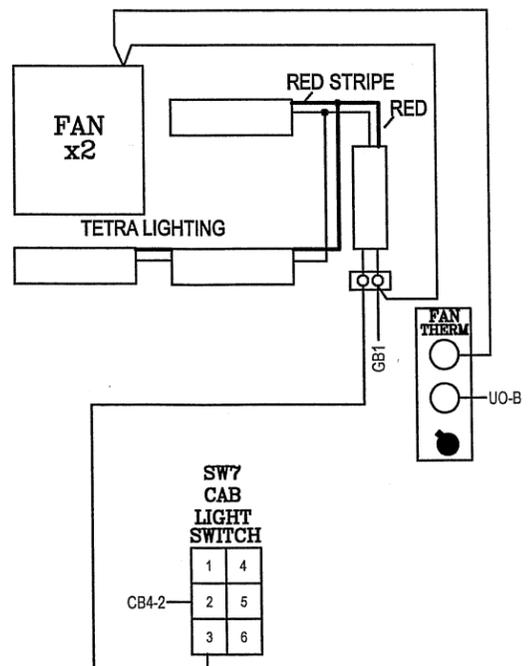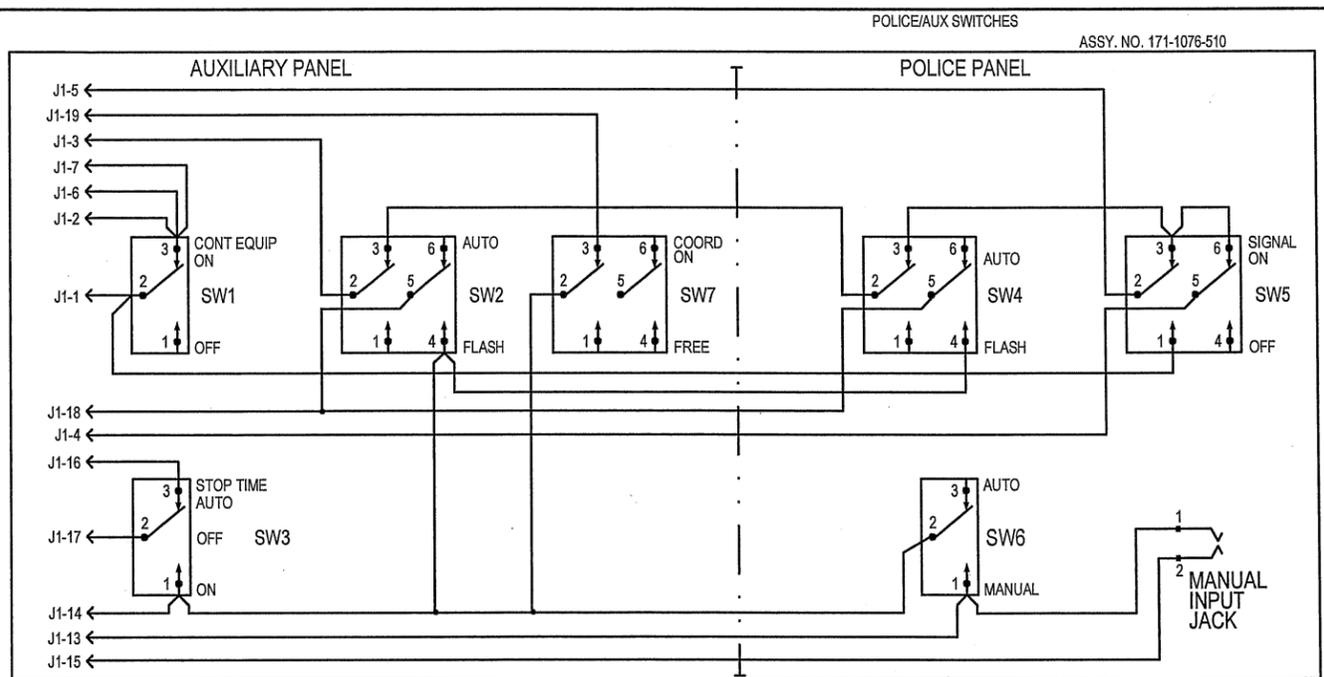

AC POWER		C/C 171-1083-528/529	
POWER BUS -PB-	FUNCTION	POWER PANEL	-CP-
TB2-12B	FILTERED AC+LINE OUT		CB3-2
TB2-10B	AC NEUTRAL OUT		SA-NO
TB2-9B	EARTH GND.		GND
TB2-8B	SIG BUS CNTRL		SSR-3

- J3-36 — 1
- MMB-1 — 2
- MMA-37 — 3
- K1-10 — 4
- FR6-2 — 5
- MMB-2 — 6
- MMA-20 — 7
- 8
- 9
- 10
- 11
- 12
- A-39 — 13
- A-35 — 14
- A-40 — 15
- A-31 — 16
- A-30 — 17
- A-32 — 18
- A-38 — 19
- A-33 — 20
- A-34 — 21
- 22
- K1-9 — 22
- 23
- B-3 — 23
- B-4 — 24
- 25
- A-35 — 25
- K1-11 — 26
- 27
- B-5 — 28
- J1-31B — 29
- 30
- J1-27B — 31
- K1-10 — 32
- 33
- K1-2 — 34
- MMB-18 — 35
- J3-1 — 36
- (N/U) — 37

(MAIN PANEL & C/C REFERENCES ONLY)



TO/FROM POLICE-AUXILIARY SWITCH PANEL	
PIN	FUNCTION
1	FILTER AC LINE (OUT)
2	SWITCHED AC LINE (IN)
3	FLASH CONTROL BUS (OUT)
4	SIGNAL BUS CONTROL (IN)
5	FLASH RELAY CONTROL (IN)
6	START DELAY AC BUS (IN)
7	MMU FLASH CONTROL BUS (IN)
8	SPARE
9	SPARE
10	SPARE
11	SPARE
12	SPARE
13	MANUAL CONT. ENABLE (IN)
14	LOGIC GROUND
15	OPT-INTERVAL ADVANCE (IN)
16	MMU STOP TIME (OUT)
17	CONTROLLER STOP TIME (IN)
18	LOCAL FLASH STATUS (IN)
19	OPT-COORD FREE (IN)
20	OPT-ALARM 1 (IN)
21	OPT-ALARM 2 (IN)
22	OPT-LOADSWITCH TEST (IN)
23	MMU 24 VOLT MON. 2 (IN)
24	+24 VDC
25	LOGIC GROUND
26	+24 VDC (IN)
27	---
28	MMU FAULT MONITOR (IN)
29	LINE FREQ. REFERENCE (IN)
30	---
31	12 VAC (IN)
32	SIGNAL BUS CONTROL (IN)
33	---
34	FILTERED AC NEUTRAL (IN)
35	CONT. EQUIP. AC LINE (OUT)
36	FILTERED AC LINE (IN)
37	---

MP P3	MAIN PANEL/CONTROLLER PWR. C/C 171-1676-504	TO POL/AUX P1
PIN	FUNCTION	PIN
1	FILTER AC LINE (OUT)	1
2	SWITCHED AC LINE (IN)	2
3	FLASH CONTROL BUS (OUT)	3
4	SIGNAL BUS CONTROL (IN)	4
5	FLASH RELAY CONTROL (IN)	5
6	START DELAY AC BUS (IN)	6
7	MMU FLASH CONTROL BUS (IN)	7
8	SPARE	8
9	SPARE	9
10	SPARE	10
11	SPARE	11
12	SPARE	12
13	OPT-MANUAL CONT. ENABLE (IN)	13
14	LOGIC GROUND	14
15	OPT-INTERVAL ADVANCE (IN)	15
16	MMU STOP TIME (OUT)	16
17	CONTROLLER STOP TIME (IN)	17
18	LOCAL FLASH STATUS (IN)	18
19	OPT-COORD FREE (IN)	19
20	OPT-ALARM 1 (IN)	20
21	OPT-ALARM 2 (IN)	21
22	OPT-LOADSWITCH TEST (IN)	22
23	MMU 24 VOLT MON. 2 (IN)	23
24	+24 VDC	24
PART OF 171-1076-504		TO PB:(JX)
25	LOGIC GROUND	1
26	+24 VDC (IN)	2
(N/U)	---	3
28	MMU FAULT MONITOR (IN)	4
29	LINE FREQ. REFERENCE (IN)	5
(N/U)	---	6
31	12 VAC (IN)	7
32	SIGNAL BUS CONTROL (IN)	8
(N/U)	---	9
34	FILTERED AC NEUTRAL (IN)	10
35	CONT. EQUIP. AC LINE (OUT)	11
36	FILTERED AC LINE (IN)	12
(N/U)	---	13
(N/U)	---	14

POLICE/AUXILIARY SWITCH PANEL		
J1 PIN	FUNCTION	TO
1	FILTER AC LINE (IN)	SW1-2
2	SWITCHED AC LINE (OUT)	SW1-3
3	FLASH CONTROL BUS (IN)	SW2-2
4	SIGNAL BUS CONTROL (OUT)	SW5-5
5	FLASH RELAY CONTROL (OUT)	SW5-2
6	START DELAY BUS (OUT)	SW1-3
7	MMU FLASH CONTROL BUS (OUT)	SW1-3
8	SPARE	---
9	SPARE	---
10	SPARE	---
11	SPARE	---
12	SPARE	---
13	MANUAL CONT. ENABLE (OUT)	SW6-1
14	LOGIC GROUND	SW3-1
15	INTERVAL ADVANCE (OUT)	MIJ-2
16	MMU STOP TIME (IN)	SW3-3
17	CONTROLLER STOP TIME (OUT)	SW3-2
18	LOCAL FLASH STATUS (OUT)	SW2-5
19	COORD FREE (OUT)	---
20	ALARM 1 (OUT)	---
21	ALARM 2 (OUT)	---
22	LOADSWITCH TEST (OUT)	---
23	MMU 24 VOLT MON. 2 (OUT)	---
24	+24 VDC (IN)	---



CONFIRMATION BEACONS

EVP 3 = 1-6
 EVP 4 = 2-5
 EVP 5 =
 EVP 6 = 4


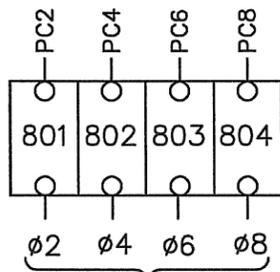
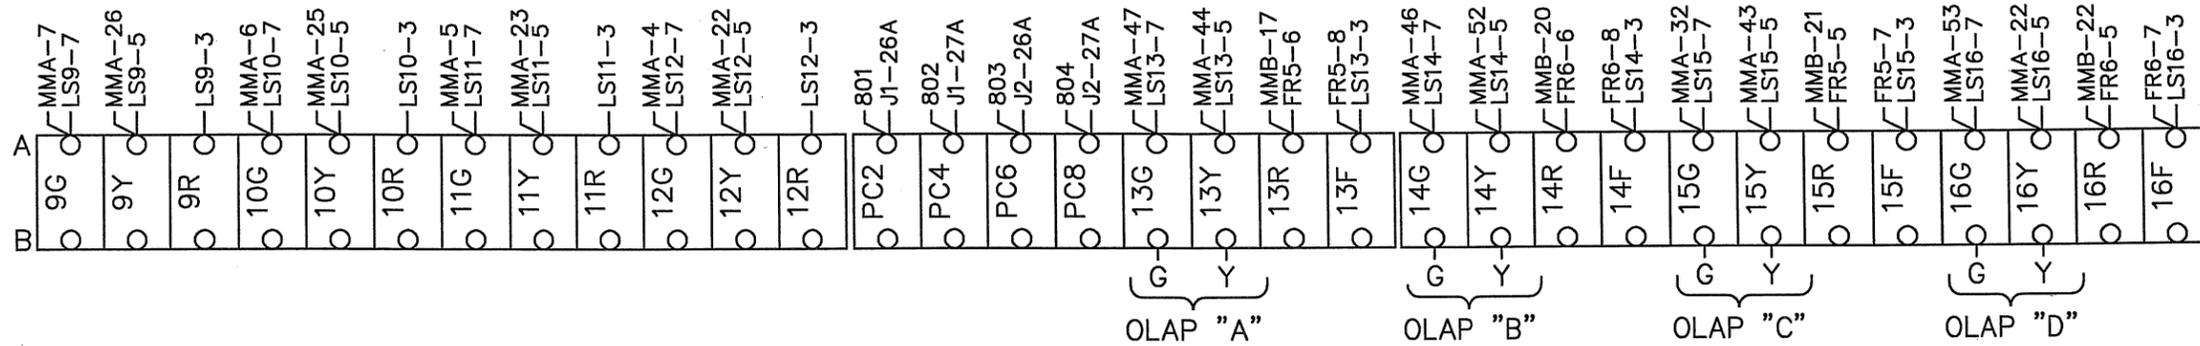


MOUNTED UNDER DETECTOR PANEL

PED. PPB (COMMON TO GB1)

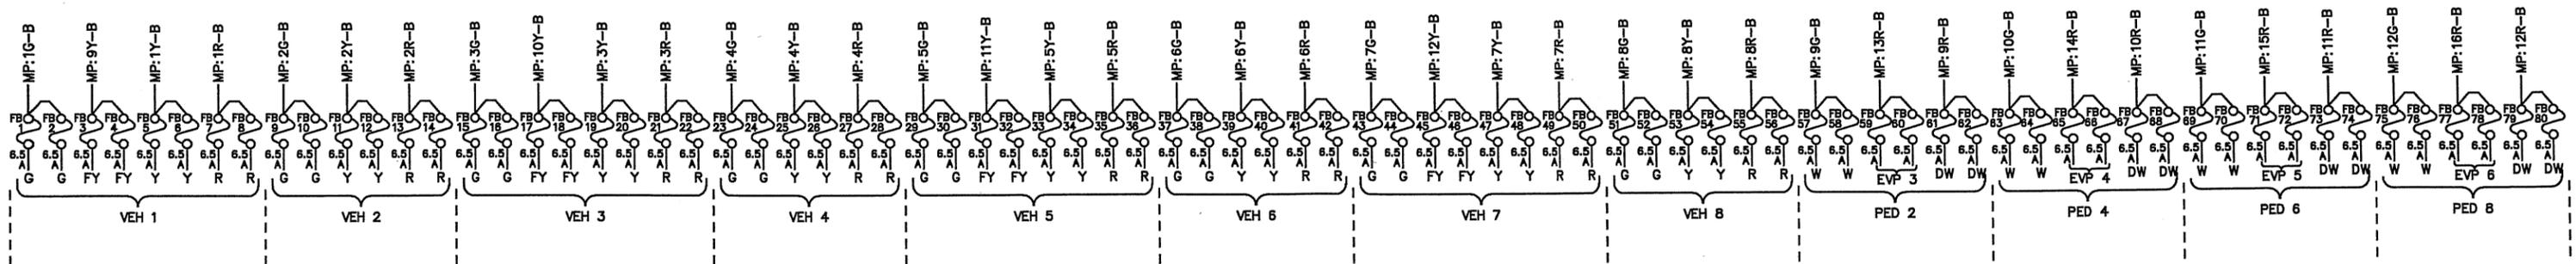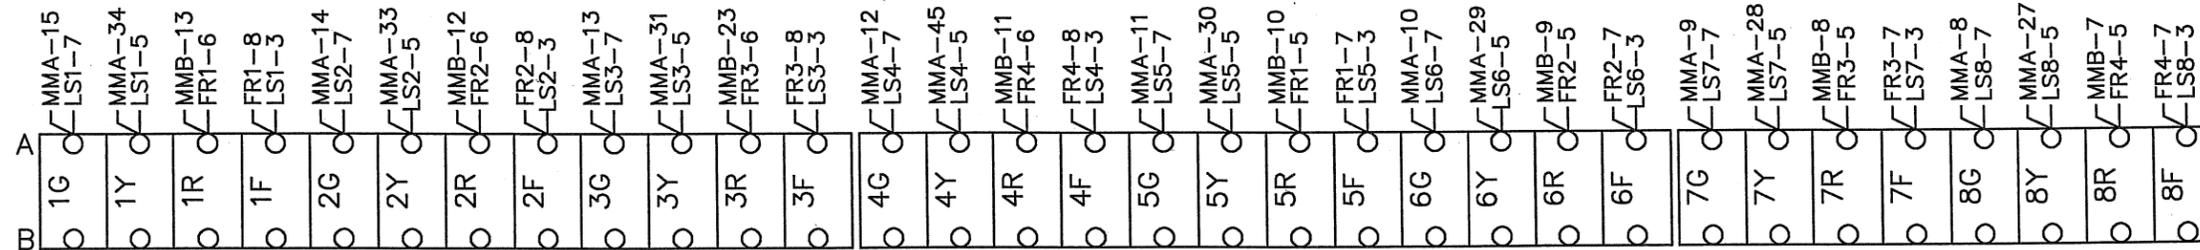

SIGNAL FIELD TERMINALS

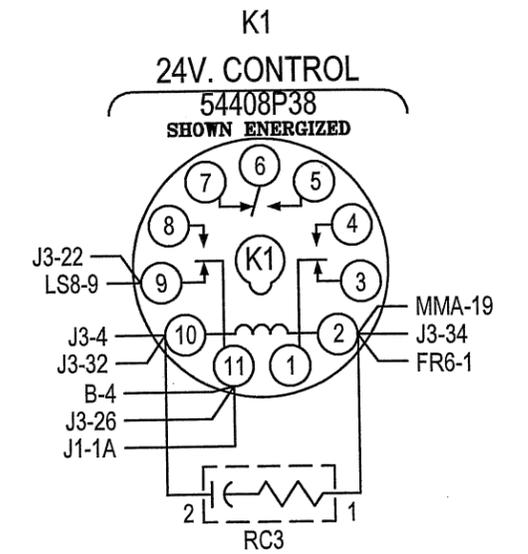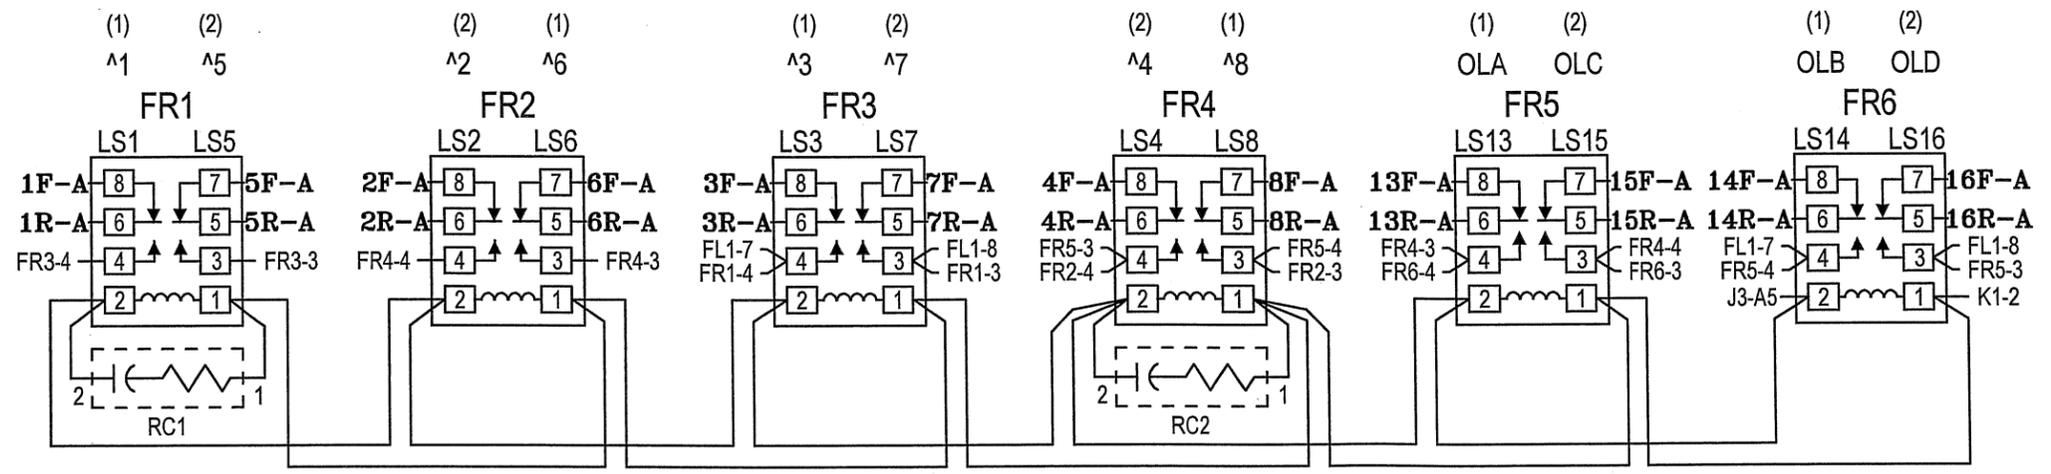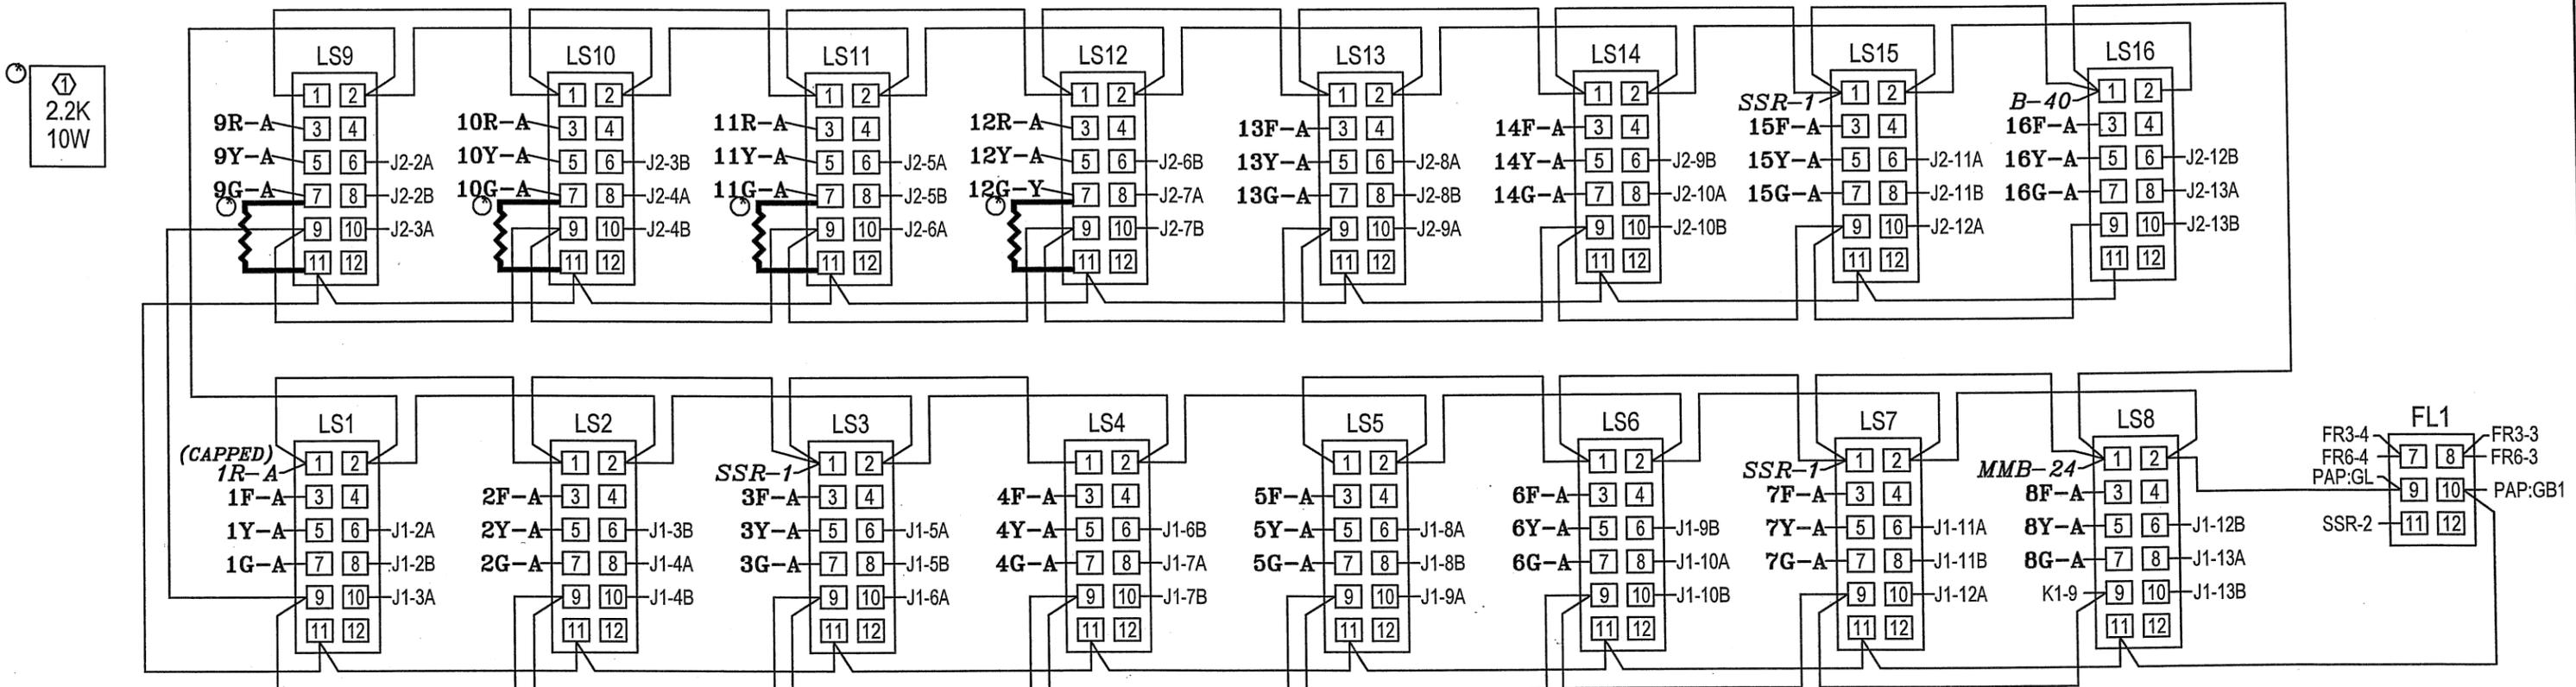

LOADBAY AND FLASH RELAY'S

1	MMU, RESET	MMA-49J2-21B	RG. 1 INHBT. MAX.
2	24 V. MON. INHBT.	MMA-36J2-22A	RG. 2 INHBT. MAX.
3	MMU, +24 V. MON. 2	J3-23	RG. 1 FORCE OFF
4	MMU, +24 V. MON. 1	MMB-15	RG. 2 FORCE OFF
5	FAULT MON.	K1-11	RG. 1 MAX. 2 SEL.
6	PC1 PED. DET. 1	J3-24	RG. 2 MAX. 2 SEL.
7	PC3 PED. DET. 3	MMA-16	CALL NONACT 1
8	PC5 PED. DET. 5	J3-28	CALL NONACT 2
9	PC7 PED. DET. 7	MMA-35	WALK REST MDRFR.
10	DET. 61	J1-25B J1-23A	EXT. MIN. RECALL
11	DET. 62	J1-26B J1-24B	EXT. START
12	DET. 63	J2-25BJ2-19A	TEST INPUT A
13	DET. 64	J2-26BJ1-25A	TEST INPUT B
14	LOGIC GND.	J2-19B J1-20A	TEST INPUT C
15	PMT. CALL 1	J2-20A J1-20B	T.B.C. DIN LINE
16	PMT. CALL 2	J2-21A J1-17B	T.B.C. AUX. 1
17	PMT. CALL 3	J2-21A J1-17B	T.B.C. AUX. 2
18	PMT. CALL 4	MMA-17	T.B.C. AUX. 3
19	PMT. CALL 5	J1-32AJ2-25A	COORD. STATUS OUT
20	PMT. CALL 6	A-20	LOGIC GND.
		J1-16A J1-21A	
		J1-16B J1-14A	
		J2-17A J1-14B	
		J2-17B J2-14A	
		J2-18A J2-14B	
		J2-18B MMA-55	
		A-27	

21	MMA AC+ I IN	MMA-1	PMT. 1 ACTV.
22	DIR1 OPEN	MMA-2	PMT. 2 ACTV.
23	DIR2 CLSD	MMA-3	ALARM 3
24	MMA SPR 1	MMA-48	ALARM 4
25	CAB INTLK A	MMA-50	ALARM 5
26	CAB INTLK B	MMA-51	ALARM 6
27	MMA SPR 2	MMA-54	LOGIC GND
28	SDR OPEN	MMB-3	LOGIC GND
29	MMB SPR 1	MMB-14	LOGIC GND
30	MMB SPR 2	MMB-16	STOP TIMING 1 & 2
31	MMB SPR 3	MMB-38	MMU STOP TIMING
32		J3-16	LOCAL FLASH STATUS
33		J2-26	ALARM 1
34		J2-22B	ALARM 2
35		J3-18	LOGIC GND
36		J2-23B	DIM ENABLE
37	SB AC+	J3-20	AUTO FLASH
38	SB AC+	J2-24A	COORD. FREE
39	SB AC+	J3-21	MANUAL CONT. ENABLE
40	SB AC+	A-27	INTRVL. ADV.
		J3-25	
		J3-14	
		J1-18B	
		J1-18A	
		J2-24B	
		J3-19	
		J1-19A	
		J3-13	
		J1-19B	
		J3-15	

INTERFACE TERMINAL BLOCKS

BIU #1		
PIN	FUNCTION	TO
1A	+24 VDC	K1-11
1B	+24 VDC	J2-1B
2A	LS1 RED	LS1-6
2B	LS1 YELLOW	LS1-8
3A	LS1 GREEN	LS1-10
3B	LS2 RED	LS2-6
4A	LS2 YELLOW	LS2-8
4B	LS2 GREEN	LS2-10
5A	LS3 RED	LS3-6
5B	LS3 YELLOW	LS3-8
6A	LS3 GREEN	LS3-10
6B	LS4 RED	LS4-6
7A	LS4 YELLOW	LS4-8
7B	LS4 GREEN	LS4-10
8A	LS5 RED	LS5-6
8B	LS5 YELLOW	LS5-8
9A	LS5 GREEN	LS5-10
9B	LS6 RED	LS6-6
10A	LS6 YELLOW	LS6-8
10B	LS6 GREEN	LS6-10
11A	LS7 RED	LS7-6
11B	LS7 YELLOW	LS7-8
12A	LS7 GREEN	LS7-10
12B	LS8 RED	LS8-6
13A	LS8 YELLOW	LS8-8
13B	LS8 GREEN	LS8-10
14A	TBC AUX 1	A-16
14B	TBC AUX 2	A-17
15A	PMT ACT 1	A-21
15B	PMT ACT 2	A-22
16A	PMT CALL 1	B-15
16B	PMT CALL 2	B-16
17A	TEST A	A-12
17B	TEST B	A-13
18A	AUTO-FLASH	A-37
18B	DIM. ENABLE	A-36
19A	MANUAL CONT.	A-39
19B	INT. ADVANCE	A-40
20A	EXT. MIN. RECALL	A-10
20B	EXT. START	A-11
21A	TBC ONLINE	A-15
21B	STOP TIME (1)	A-30
22A	STOP TIME (2)	A-30
22B	MAX. 2 (1)	A-5
23A	MAX. 2 (2)	A-6
23B	FORCE OFF (1)	A-3
24A	FORCE OFF (2)	A-4
24B	CNA 1	A-7
25A	WALK REST MOD.	A-9
25B	PED. ISO. 1	B-6
26A	PED. ISO. 2	PC2-A
26B	PED. ISO. 3	B-7
27A	PED. ISO. 4	PC4-A
27B	PED. ISO. COMN.	J3-D1
28A	ADDR. SEL. 0	---
28B	ADDR. SEL. 1	---
29A	ADDR. SEL. 2	---
29B	ADDR. SEL. 3	---
30A	RESERVED	---
30B	RESERVED	---
31A	EARTH GND.	LS12-2
31B	LINE FREQ. REF.	J3-C9
32A	LOGIC GND.	B-14
32B	LOGIC GND.	J2-32A

BIU #2		
PIN	FUNCTION	TO
1A	+24 VDC	J2-1B
1B	+24 VDC	J1-1B
2A	LS9 RED	LS9-6
2B	LS9 YELLOW	LS9-8
3A	LS9 GREEN	LS9-10
3B	LS10 RED	LS10-6
4A	LS10 YELLOW	LS10-8
4B	LS10 GREEN	LS10-10
5A	LS11 RED	LS11-6
5B	LS11 YELLOW	LS11-8
6A	LS11 GREEN	LS11-10
6B	LS12 RED	LS12-6
7A	LS12 YELLOW	LS12-8
7B	LS12 GREEN	LS12-10
8A	LS13 RED	LS13-6
8B	LS13 YELLOW	LS13-8
9A	LS13 GREEN	LS13-10
9B	LS14 RED	LS14-6
10A	LS14 YELLOW	LS14-8
10B	LS14 GREEN	LS14-10
11A	LS15 RED	LS15-6
11B	LS15 YELLOW	LS15-8
12A	LS15 GREEN	LS15-10
12B	LS16-RED	LS16-6
13A	LS16-YELLOW	LS16-8
13B	LS16-GREEN	LS16-10
14A	TBC AUX 3	A-18
14B	COORD. STATUS	A-19
15A	ALARM 3	A-23
15B	ALARM 4	A-24
16A	ALARM 5	A-25
16B	ALARM 6	A-26
17A	PMT CALL 3	B-17
17B	PMT CALL 4	B-18
18A	PMT CALL 5	B-19
18B	PMT CALL 6	B-20
19A	CNA 2	A-8
19B	SPARE 1	B-10
20A	SPARE 2	B-11
20B	SPARE 3	B-12
21A	SPARE 4	B-13
21B	INHIBIT MAX (1)	A-1
22A	INHIBIT MAX (2)	A-2
22B	LOCAL FLASH	A-32
23A	MMU FLASH	A-31
23B	ALARM 1	A-33
24A	ALARM 2	A-34
24B	COORD FREE IN	A-38
25A	TEST C	A-14
25B	PED. ISO. 5	B-8
26A	PED. ISO. 6	PC6-A
26B	PED. ISO. 7	B-9
27A	PED. ISO. 8	PC8-A
27B	PED. ISO. COMN.	J1-27B
28A	ADDR. SEL. 0	J2-32A
28B	ADDR. SEL. 1	---
29A	ADDR. SEL. 2	---
29B	ADDR. SEL. 3	---
30A	RESERVED	---
30B	RESERVED	---
31A	EARTH GND.	J1-31A
31B	LINE FREQ. REF.	J1-31B
32A	LOGIC GND.	J1-32B
32B	LOGIC GND.	J2-32A

DETECTOR BIU		
PIN	FUNCTION	
1A	+24 VDC	
1B	+24 VDC	
2A		
2B		
3A		
3B		
4A		
4B		
5A		
5B		
6A		
6B		
7A		
7B		
8A		
8B		
9A		
9B	CH. 1 CALL	
10A	CH. 2 CALL	
10B	CH. 3 CALL	
11A	CH. 4 CALL	
11B	CH. 5 CALL	
12A	CH. 6 CALL	
12B	CH. 7 CALL	
13A	CH. 8 CALL	
13B	CH. 9 CALL	
14A	CH. 10 CALL	
14B	CH. 11 CALL	
15A	CH. 12 CALL	
15B	CH. 13 CALL	
16A	CH. 14 CALL	
16B	CH. 15 CALL	
17A	CH. 16 CALL	
17B	CH. 1 FAULT STATUS	
18A	CH. 2 FAULT STATUS	
18B	CH. 3 FAULT STATUS	
19A	CH. 4 FAULT STATUS	
19B	CH. 5 FAULT STATUS	
20A	CH. 6 FAULT STATUS	
20B	CH. 7 FAULT STATUS	
21A	CH. 8 FAULT STATUS	
21B	CH. 9 FAULT STATUS	
22A	CH. 10 FAULT STATUS	
22B	CH. 11 FAULT STATUS	
23A	CH. 12 FAULT STATUS	
23B	CH. 13 FAULT STATUS	
24A	CH. 14 FAULT STATUS	
24B	CH. 15 FAULT STATUS	
25A	CH. 16 FAULT STATUS	
25B		
26A		
26B		
27A		
27B		
28A	ADDR. SEL. 0	
28B	ADDR. SEL. 1	
29A	ADDR. SEL. 2	
29B	ADDR. SEL. 3	
30A		
30B		
31A	EARTH GND.	J1-31A
31B	LINE FREQ. REF.	J1-31B
32A	LOGIC GND.	J1-32B
32B	LOGIC GND.	J2-32A

MAIN PANEL CONTROL POWER C/C 171-1676-504	
PIN	FUNCTION
1	LOGIC GROUND
2	+24 VDC (IN)
3	---
4	MMU FAULT MONITOR (IN)
5	LINE FREQ. REFERENCE (IN)
6	---
7	+12 VAC (IN)
8	SIGNAL BUS CONTROL (IN)
9	---
10	FILTERED AC NEUTRAL (IN)
11	CONT. EQUIP. AC LINE (OUT)
12	FILTERED AC LINE (IN)
13	---
14	---


CONTROLLER POWER (CCA2) C/C 171-1676-503			
WIRE	PIN	SIGNAL	TO
1	A	FAULT MONITOR	PB-4
2	U	AC NEUTRAL	PB-10
3	V	EARTH GROUND	PB-9
4	W	LOGIC GROUND	PB-1
5	P	AC LINE	PB-11
6	SHL	EARTH GROUND	CCA2-V

TYPE 1 CONTROLLER POWER C/C 171-1676-502		
PIN	FUNCTION	TO
A	AC NEUTRAL	PB-10
B	---	---
C	AC LINE	PB-11
D	---	---
E	+24 VDC	PB-3
F	RESERVED	PB-2
G	FAULT MON.	PB-4
H	LOGIC GND.	PB-1
I	EARTH GND.	PB-9
J	---	---
SHL	EARTH GND.	PB-6

CABINET POWER SUPPLY C/C 171-1676-511		
PIN	FUNCTION	TO
A	AC NEUTRAL	PB-10
B	LINE FREQUENCY REF.	PB-5
C	AC LINE	PB-11
D	+12 VDC	PB-3
E	+24 VDC	PB-2
F	RESERVED	---
G	LOGIC GND.	PB-1
H	EARTH GND.	PB-9
I	+12 VAC	PB-7
J	RESERVED	---
SHL	EARTH GND.	PIN H

CONTROLLER PORT 1 CONNECTOR			
PIN	SIGNAL	TO	FUNCTION
1	TWISTED PAIR 1+	SDLC-1	CONT TXD+
2	LOGIC GND.	---	---
3	TWISTED PAIR 2+	SDLC-4	CONT TXC+
4	LOGIC GND.	---	---
5	TWISTED PAIR 3+	SDLC-7	CONT RXD+
6	LOGIC GND.	---	---
7	TWISTED PAIR 4+	SDLC-10	CONT RXC+
8	LOGIC GND.	---	---
9	TWISTED PAIR 1-	SDLC-2	CONT TXD-
10	PORT 1 DISABLE	---	---
11	TWISTED PAIR 2-	SDLC-5	CONT TXC-
12	EARTH GND.	SHIELD WIRE	---
13	TWISTED PAIR 3-	SDLC-8	CONT RXD-
14	RESERVED	---	---
15	TWISTED PAIR 4-	SDLC-11	CONT RXC-


MMU & BIU PORT 1 CONNECTOR			
PIN	SIGNAL	TO	FUNCTION
1	TWISTED PAIR 1+	SDLC-1	BIU RXD+
2	LOGIC GND.	---	---
3	TWISTED PAIR 2+	SDLC-4	BIU RXC+
4	LOGIC GND.	---	---
5	TWISTED PAIR 3+	SDLC-7	BIU TXD+
6	LOGIC GND.	---	---
7	TWISTED PAIR 4+	SDLC-10	BIU TXC+
8	LOGIC GND.	---	---
9	TWISTED PAIR 1-	SDLC-2	BIU RXD-
10	PORT 1 DISABLE	---	---
11	TWISTED PAIR 2-	SDLC-5	BIU RXC-
12	EARTH GND.	SHIELD WIRE	---
13	TWISTED PAIR 3-	SDLC-8	BIU TXD-
14	RESERVED	---	---
15	TWISTED PAIR 4-	SDLC-11	BIU TXC-

 

FRONT VIEW OF BU1 - BU5



FRONT VIEW OF J1-J6

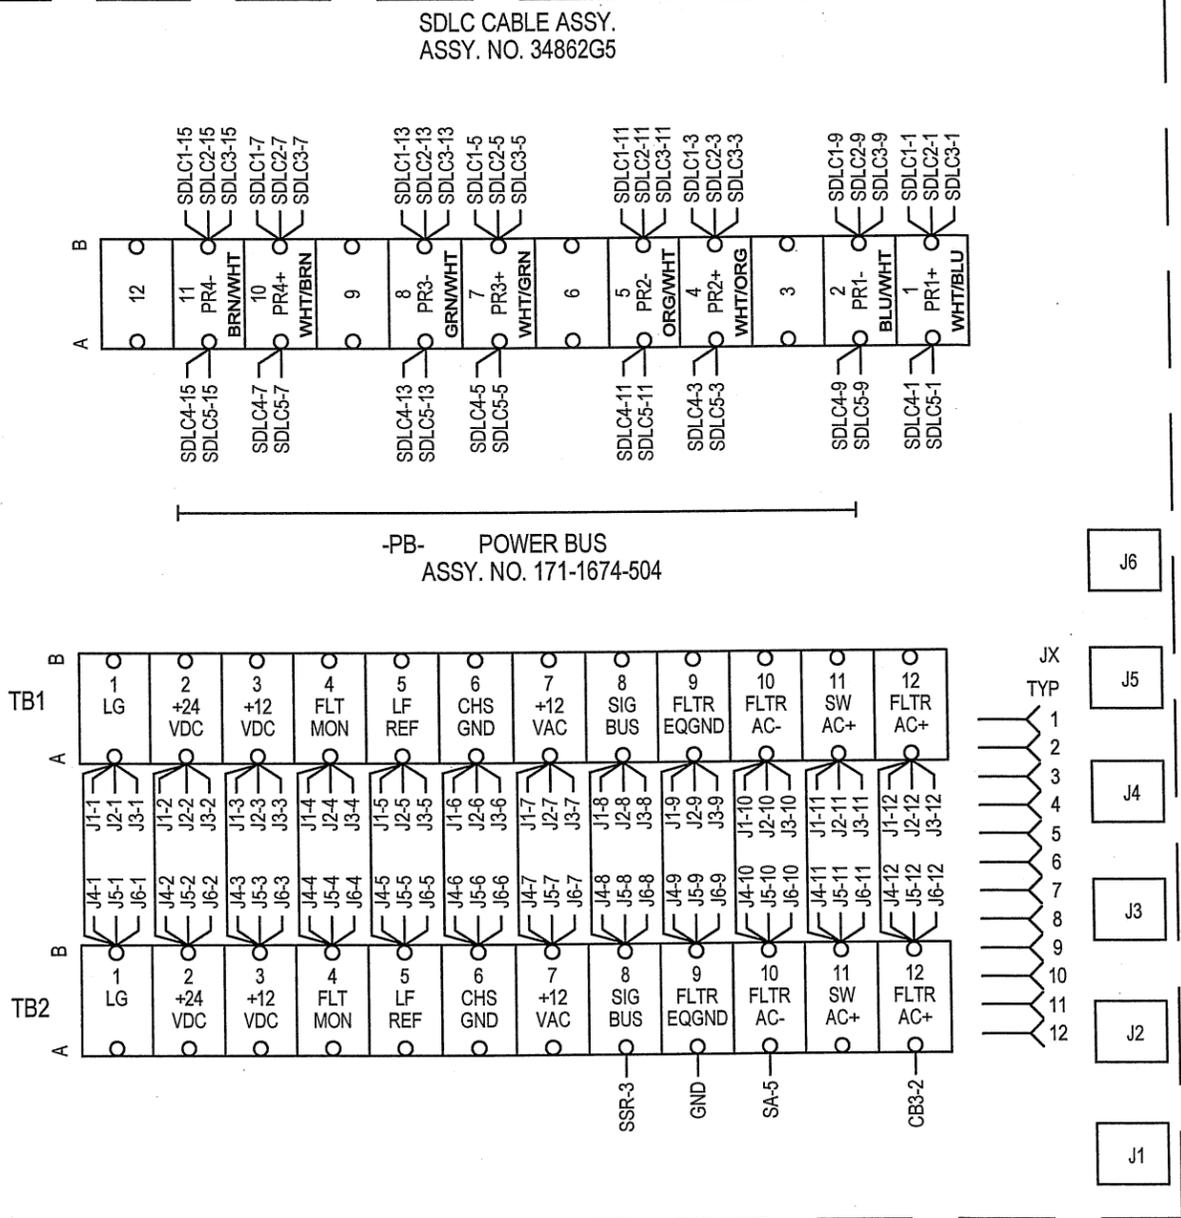

BIU AND CONNECTING CABLES

WIRE LIST FOR NEMA MALFUNCTION MANAGEMENT UNIT

CONNECTOR "A" (MMA)				CONNECTOR "B" (MMB)				
PIN	WIRE	MON. FUNCTION	SIG. FUNCTION	PIN	WIRE	MON. FUNCTION	SIG. FUNCTION	
A	A-1	AC+ I INPUT	B21	A	B-1	AC+ II INPUT	J3-2	MMU POWER
B	A-2	OUT RLY 1 OPEN	B22	B	B-2	S. DLY RLY COMM.	J3-6	MMU POWER
C	A-3	OUT RLY 2 CLSD	B23	C	B-3	S. DLY RLY OPEN	B28	
D	A-4	CH. 12 GREEN	12G-A	D	B-4	CH. 12 RED	B40	
E	A-5	CH. 11 GREEN	11G-A	E	B-5	CH. 11 RED	B39	
F	A-6	CH. 10 GREEN	10G-A	F	B-6	CH. 9 RED	B37	
G	A-7	CH. 9 GREEN	9G-A	G	B-7	CH. 8 RED	8R-A	^8 RED
H	A-8	CH. 8 GREEN	8G-A	H	B-8	CH. 7 RED	7R-A	^7 RED
J	A-9	CH. 7 GREEN	7G-A	J	B-9	CH. 6 RED	6R-A	^6 RED
K	A-10	CH. 6 GREEN	6G-A	K	B-10	CH. 5 RED	5R-A	^5 RED
L	A-11	CH. 5 GREEN	5G-A	L	B-11	CH. 4 RED	4R-A	^4 RED
M	A-12	CH. 4 GREEN	4G-A	M	B-12	CH. 2 RED	2R-A	^2 RED
N	A-13	CH. 3 GREEN	3G-A	N	B-13	CH. 1 RED	1R-A	^1 RED
P	A-14	CH. 2 GREEN	2G-A	P	B-14	(SPARE 1)	B29	
R	A-15	CH. 1 GREEN	1G-A	R	B-15	+24V MONITOR II	B-3	+24V MON. II
S	A-16	+24V MON. I	B-4	S	B-16	(SPARE 2)	B30	
T	A-17	LOGIC GND	B-14	T	B-17	CH. 13 RED	13R-A	OLA RED
U	A-18	CHASSIS GND	LS7-2	U	B-18	S. DLY RLY CLSD	J3-35	CONT. POWER
V	A-19	AC- (COMMON)	K1-2	V	B-19	CH. 10 RED	B38	
W	A-20	OUT RLY 1 COM.	J3-7	W	B-20	CH. 14 RED	14R-A	OLB RED
X	A-21	OUT RLY 2 COM.	A-27	X	B-21	CH. 15 RED	15R-A	OLC RED
Y	A-22	CH. 12 YELLOW	-T-	Y	B-22	CH. 16 RED	16R-A	OLD RED
Z	A-23	CH. 11 YELLOW	-T-	Z	B-23	CH. 3 RED	3R-A	^3 RED
a	A-24	CH. 10 WALK	----	a	B-24	RED ENABLE	LS8-1	SIG BUS CON.
b	A-25	CH. 10 YELLOW	-T-	b	B-25	(SPARE 3)	B31	
c	A-26	CH. 9 YELLOW	-T-	c	B-26	LOCAL FLASH IN	CAPPED	POL/AX FLSH
d	A-27	CH. 8 YELLOW	8Y-A		B-27	SHELL GROUND	LS6-2	EARTH GND.
e	A-28	CH. 7 YELLOW	7Y-A					
f	A-29	CH. 6 YELLOW	6Y-A					
g	A-30	CH. 5 YELLOW	5Y-A					
h	A-31	CH. 3 YELLOW	3Y-A					
i	A-32	CH. 15 GREEN	15G-A					
j	A-33	CH. 2 YELLOW	2Y-A					
k	A-34	CH. 1 YELLOW	1Y-A					
m	A-35	CONT. VOLT. MON.	B-5					
n	A-36	+24V MON. INH.	B-2					
p	A-37	OUT RLY 1 CLSD	J3-3					
q	A-38	OUT RLY 2 OPEN	A-31					
r	A-39	CH. 12 WALK	----					
s	A-40	CH. 11 WALK	----					
t	A-41	CH. 9 WALK	----					
u	A-42	CH. 16 YELLOW	16Y-A					
v	A-43	CH. 15 YELLOW	15Y-A					
w	A-44	CH. 13 YELLOW	13Y-A					
x	A-45	CH. 4 YELLOW	4Y-A					
y	A-46	CH. 14 GREEN	14G-A					
z	A-47	CH. 13 GREEN	13G-A					
AA	A-48	(SPARE 1)	B24					
BB	A-49	RESET	B-1					
CC	A-50	CAB. INTLK A	B25					
DD	A-51	CAB. INTLK B	B26					
EE	A-52	CH. 14 YELLOW	14Y-A					
FF	A-53	CH. 16 GREEN	16G-A					
GG	A-54	(SPARE 2)	B27					
HH	A-55	TYPE SELECT	A-20					
	A-56	SHELL GND	LS15-2					


NOTES FOR 16 CHANNEL M.M.U.

- (1) RELAY CONTACT POSITIONS SPECIFIED ARE FOR NON-CONFLICT MODE.
- (2) TO PROGRAM MMU, SOLDER JUMPERS IN PROGRAMMING CARD FOR ALL PERMISSABLE PHASE MOVEMENTS, MINIMUM CHANGE DISABLE FOR ALL PEDESTRIAN CHANNELS, AND MIN. FLASH, VOLTAGE MON., AND 24V. MON. LATCH OPTIONS AS DESIRED.

M.M.U. CHANNEL ASSIGNMENTS

CH. 1 = L/S 1 = ^1 VEH.	CH. 10 = L/S 10 = ^4 PED.
CH. 2 = L/S 2 = ^2 VEH.	CH. 11 = L/S 11 = ^6 PED.
CH. 3 = L/S 3 = ^3 VEH.	CH. 12 = L/S 12 = ^8 PED.
CH. 4 = L/S 4 = ^4 VEH.	CH. 13 = L/S 13 = OLAP A
CH. 5 = L/S 5 = ^5 VEH.	CH. 14 = L/S 14 = OLAP B
CH. 6 = L/S 6 = ^6 VEH.	CH. 15 = L/S 15 = OLAP C
CH. 7 = L/S 7 = ^7 VEH.	CH. 16 = L/S 16 = OLAP D
CH. 8 = L/S 8 = ^8 VEH.	
CH. 9 = L/S 9 = ^2 PED.	

MMU PROGRAM CARD

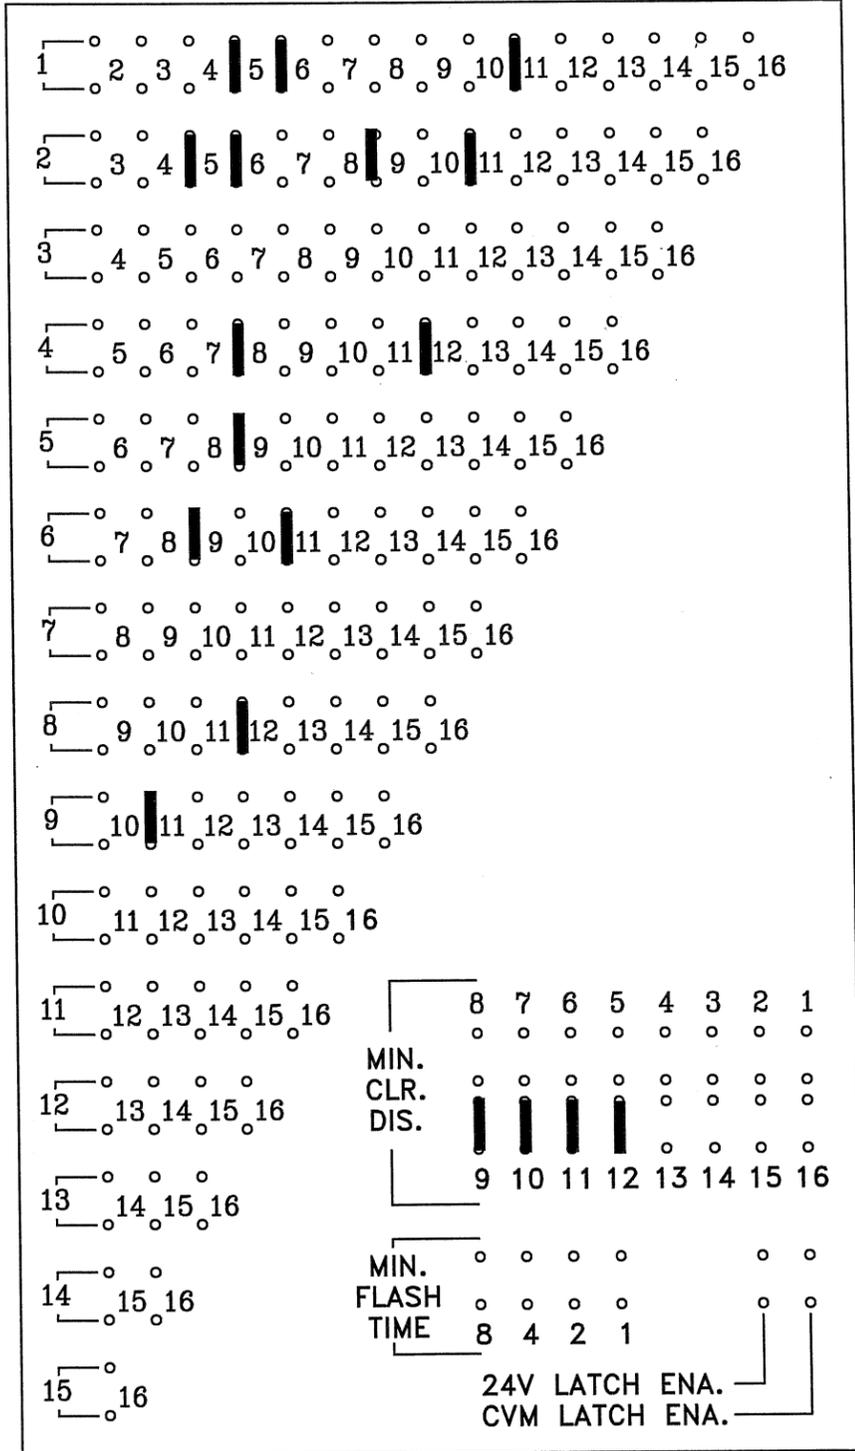

M.M.U. C/C'S AND PROGRAM CARD

DETECTOR RACK 34030G1 #1

B.I.U.	L3	L1	L7	L5	L11	L9	L15	L13	PMT 5 <input type="checkbox"/> 2CH OPTICOM/ OPIC CH. C CH. D	PMT 3 <input type="checkbox"/> 2CH OPTICOM/ OPIC CH. A CH. B	PGM. CARD
	5-1	1-1	6-1	2-1	4-3	4-1					
	<input type="checkbox"/> 2CH										
	L4	L2	L8	L6	L12	L10	L16	L14	PMT 6	PMT 4	

DETECTOR RACK 34030G1 #2

B.I.U.	L3	L1	L7	L5	L11	L9	L15	L13	NOT USED	NOT USED	PGM. CARD
	<input type="checkbox"/> 2CH										
	L4	L2	L8	L6	L12	L10	L16	L14			

DETECTOR ASSIGNMENTS

CONT. INPUT	PHASE ASGN.	DETECTOR TYPE
1	1-1	1
2	1-2	1
3	5-1	1
4	5-2	1
5	2-1	1
6	2-2	1
7	4-1	1
8	4-2	1
9	4-3	1
10	4-4	1
11		
12		
13		
14		
15		
16		

RACK #1

DETECTOR ASSIGNMENTS

CONT. INPUT	PHASE ASGN.	DETECTOR TYPE
17		
18		
19		
20		
21		
22		
23		
24		
25		
26		
27		
28		
29		
30		
31		
32		



RACK #2

RACK #	JMPR	DET. #'S
1		1-16
2		17-32
3		33-48

DETECTOR RACK PROGRAMMING JUMPERS

DC POWER	DET. TYPE	CONFIGURATION ④				DET. CMNS.																												
		SLOT 1/2				SLOT 3/4				SLOT 5/6				SLOT 7/8																				
JP31	JP32	JP33	JP34	JP3	JP4	JP5	JP6	JP7	JP8	JP9	JP10	JP11	JP12	JP13	JP14	JP15	JP16	JP17	JP18	JP19	JP20	JP21	JP22	TP1	JP23	JP24	JP25	JP26	JP27	JP28	TP2	JP29	JP30	JP38-JP55
<input type="checkbox"/>	②																																	
<input type="checkbox"/>	②																																	
<input type="checkbox"/>	②																																	
<input type="checkbox"/>	②																																	

- ① INSTALL JUMPERS ON JP31 THRU JP34 WHEN A SHELF MOUNT POWER SUPPLY IS USED. WARNING - DO NOT INSTALL JUMPERS WHEN A PLUG-IN POWER SUPPLY IS USED.
- ② INSTALL JUMPERS ON JP38 - JP55 WHEN PGM. CARD IS NOT USED.
- ③ PROGRAM CARD AND PLUG-IN POWER SUPPLY ARE FOR TS-1 APPLICATIONS ONLY. REMOVE FOR TS-2 APPLICATIONS.
- ④ PROGRAM JUMPERS USING CONFIGURATION NUMBER AS SHOWN BY ASTERISK.

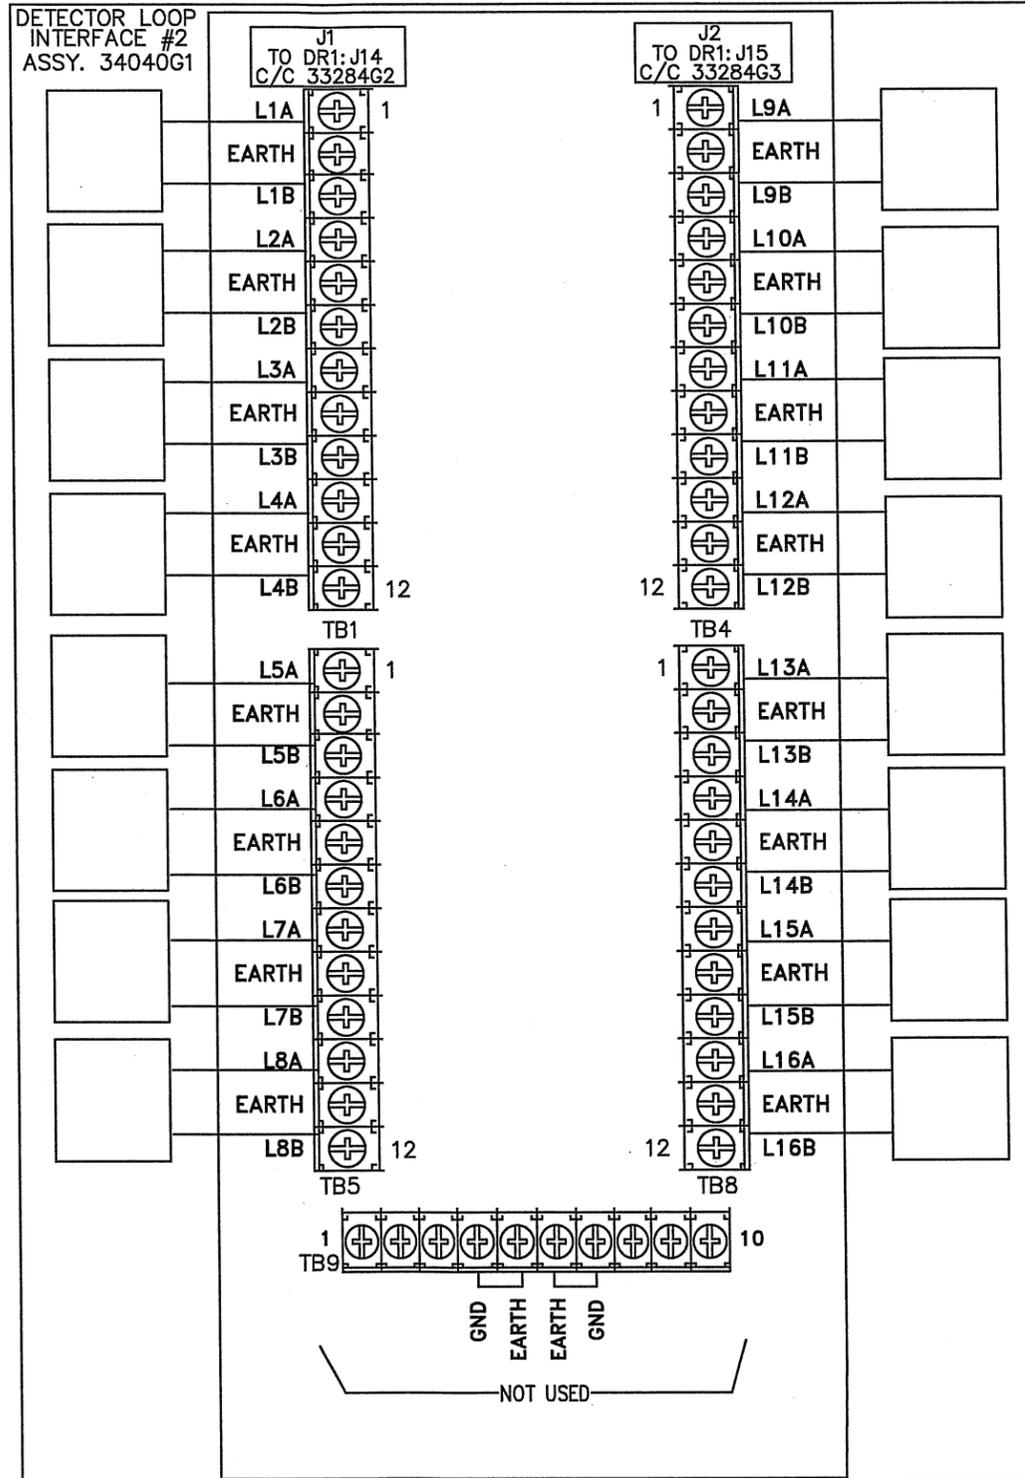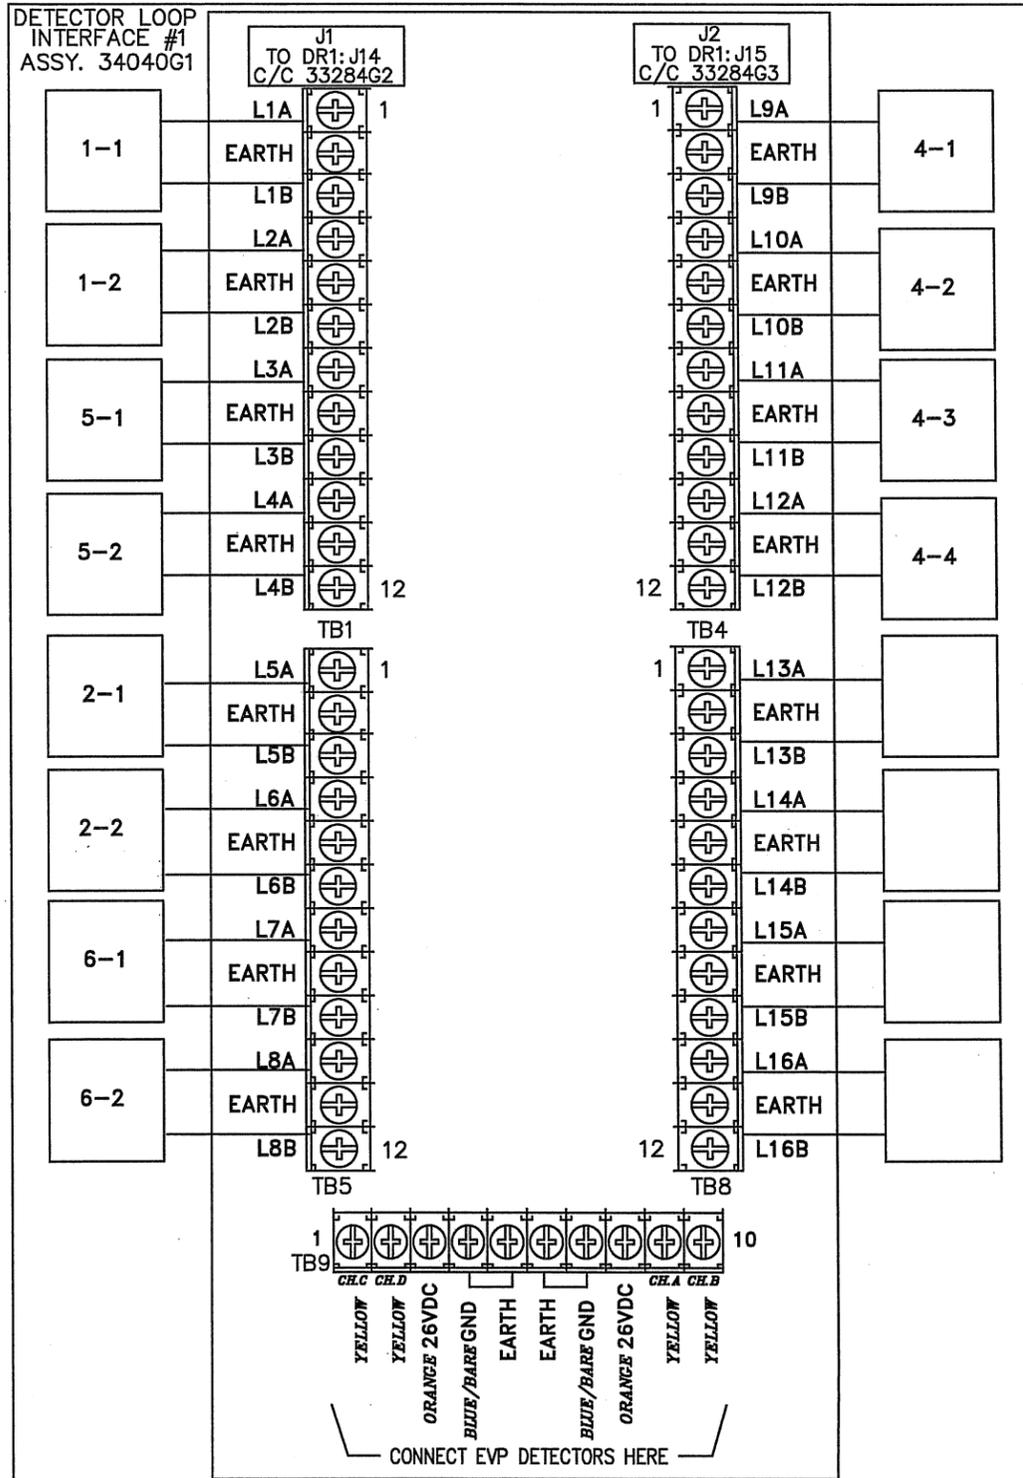

DET. LOOPS 1-8 (J14) C/C 33284G2

PIN	SIGNAL	TO
1	LOOP 1+	LP1: TB1-1
2	LOOP 1-	LP1: TB1-3
3	LOOP 2+	LP1: TB1-4
4	LOOP 2-	LP1: TB1-6
5	LOOP 3+	LP1: TB1-7
6	LOOP 3-	LP1: TB1-9
7	LOOP 4+	LP1: TB1-10
8	LOOP 4-	LP1: TB1-12
9	LOOP 5+	LP1: TB5-1
10	LOOP 5-	LP1: TB5-3
11	LOOP 6+	LP1: TB5-4
12	LOOP 6-	LP1: TB5-6
13	LOOP 7+	LP1: TB5-7
14	LOOP 7-	LP1: TB5-9
15	LOOP 8+	LP1: TB5-10
16	LOOP 8-	LP1: TB5-12
17	PMT. DET. CH. C	LP1: TB9-1
18	PMT. DET. CH. D	LP1: TB9-2
19	KEY PIN	
20	PMT. CH. C/D +26VDC	LP1: TB9-3
21	PMT. DC GROUND	LP1: TB9-4,7
22	PMT. CH. A/B +26VDC	LP1: TB9-8
23	PMT. DET. CH. A	LP1: TB9-9
24	PMT. DET. CH. B	LP1: TB9-10
25	-----	
26	-----	

DET. LOOPS 9-16 (J15) C/C 33284G3

PIN	SIGNAL	TO
1	LOOP 9+	LP2: TB4-1
2	LOOP 9-	LP2: TB4-3
3	LOOP 10+	LP2: TB4-4
4	LOOP 10-	LP2: TB4-6
5	LOOP 11+	LP2: TB4-7
6	LOOP 11-	LP2: TB4-9
7	LOOP 12+	LP2: TB4-10
8	LOOP 12-	LP2: TB4-12
9	LOOP 13+	LP2: TB8-1
10	LOOP 13-	LP2: TB8-3
11	LOOP 14+	LP2: TB8-4
12	LOOP 14-	LP2: TB8-6
13	LOOP 15+	LP2: TB8-7
14	LOOP 15-	LP2: TB8-9
15	LOOP 16+	LP2: TB8-10
16	LOOP 16-	LP2: TB8-12
17	-----	
18	-----	
19	-----	
20	-----	

DET. RACK POWER
171-1676-515

P1/ DR: J13	P2/ DR: J17	FUNCTION	TO
1		+12 VDC (DET. POWER)	PB-3
2		+24 VDC (BIU POWER)	PB-2
3		LOGIC GROUND	PB-1
4		EARTH GROUND	PB-9
5		"KEY PIN"	
6		LINE FREQUENCY REF.	PB-5
	1	EARTH GROUND	-----
	2	AC LINE	PB-12
	3	AC NEUTRAL	PB-10
	4	LOGIC GROUND	-----

EXPANSION OUTPUTS
C/C 33284G84

J16	FUNCTION	TO
17	DET. 17 / PMT. A OUT	MP: B19
18	DET. 18 / PMT. B OUT	MP: B20
19	PMT. C OUT	MP: B17
20	PMT. D OUT	MP: B18

RACK #1 ONLY

DETECTOR LOOP INTERFACE

B.I.U	DET	PH	F	DET	DLY	EXT	DET	PH	F	DET	DLY	EXT	DET	PH	F	DET	DLY	EXT	DET	PH	F	DET	DLY	EXT	EVP	PH	POLE #	CONT CH #
	CH 1	1		1-1			CH 5	2		2-1			CH 9	4		4-1		1	CH 13						CH 1	1-6	1	3
	CH 2	1		1-2			CH 6	2		2-2			CH 10	4		4-2		1	CH 14						CH 2	2-5	3	4
	CH 3	5		5-1			CH 7	6		6-1			CH 11	4		4-3			CH 15						CH 3			
	CH 4	5		5-2			CH 8	6		6-2			CH 12	4		4-4	10		CH 16						CH 4	4	4	6
B.I.U	DET	PH	F	DET	DLY	EXT	DET	PH	F	DET	DLY	EXT	DET	PH	F	DET	DLY	EXT	DET	PH	F	DET	DLY	EXT				
	CH 17						CH 21						CH 25						CH 29									
	CH 18						CH 22						CH 26						CH 30									
	CH 19						CH 23						CH 27						CH 31									
	CH 20						CH 24						CH 28						CH 32									

