



CENTERLINE CULVERT INSTALLATION

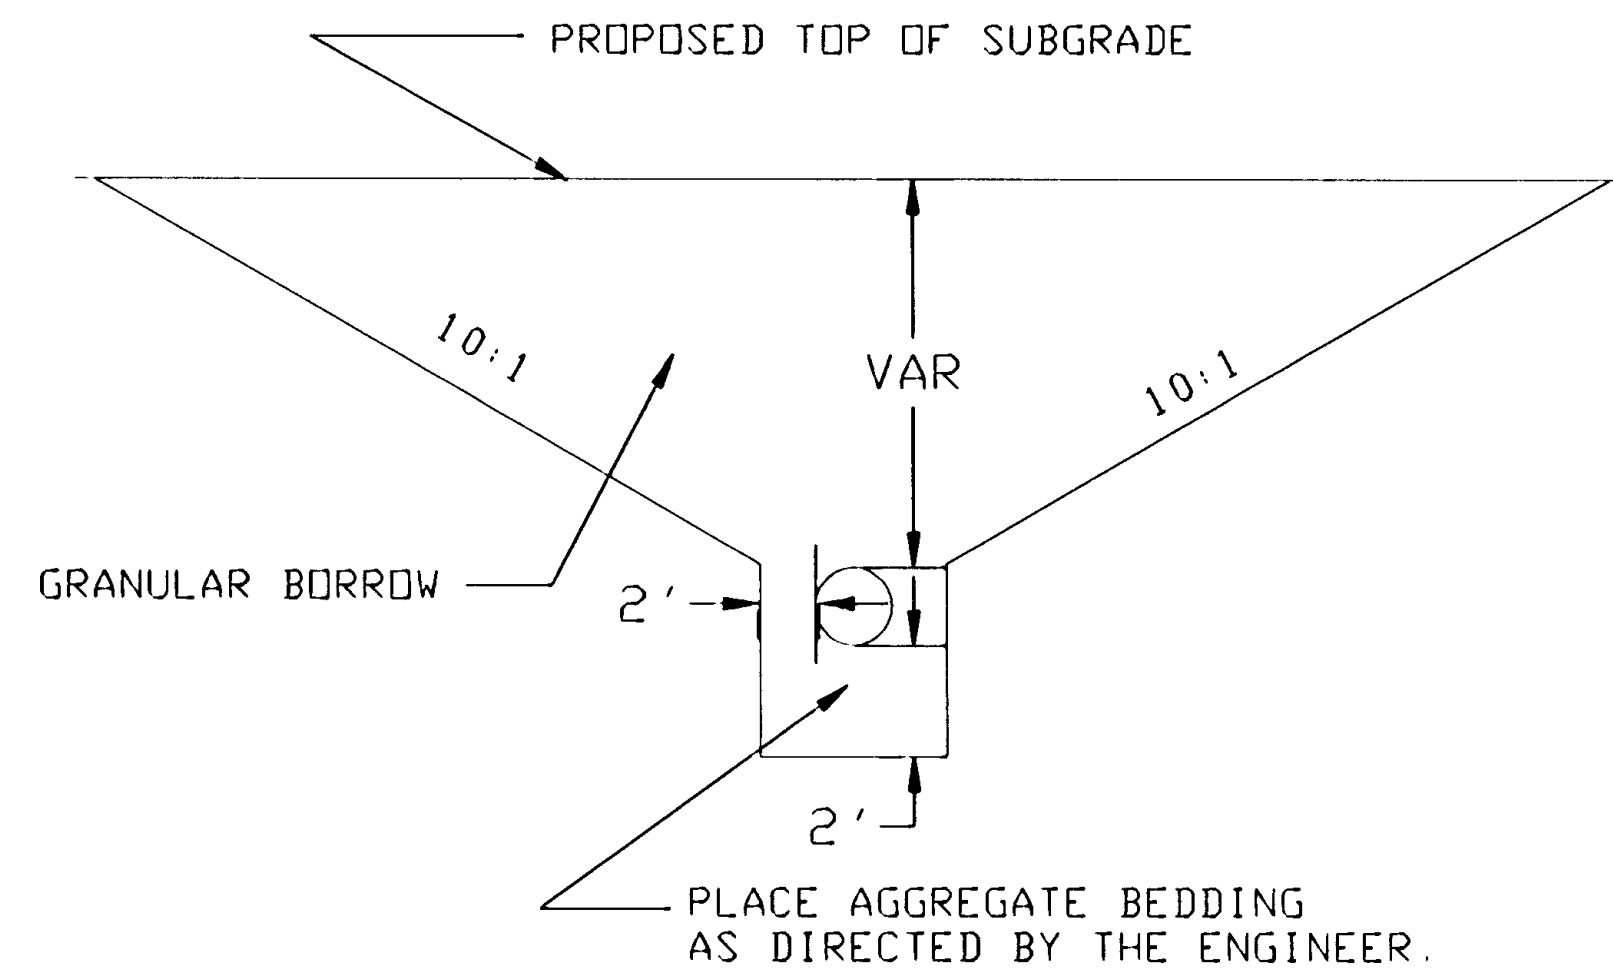

- NOTE:
- * FILL AND COMPACT GRANULAR TO 4" ABOVE FLOWLINE BEFORE PLACING CULVERT.
 - * AT CENTERLINE CULVERT LOCATIONS CULVERT EXCAVATION TO EXTEND 3' BEYOND END OF APRON.


ENTRANCE SLOPES

FILL SECTION

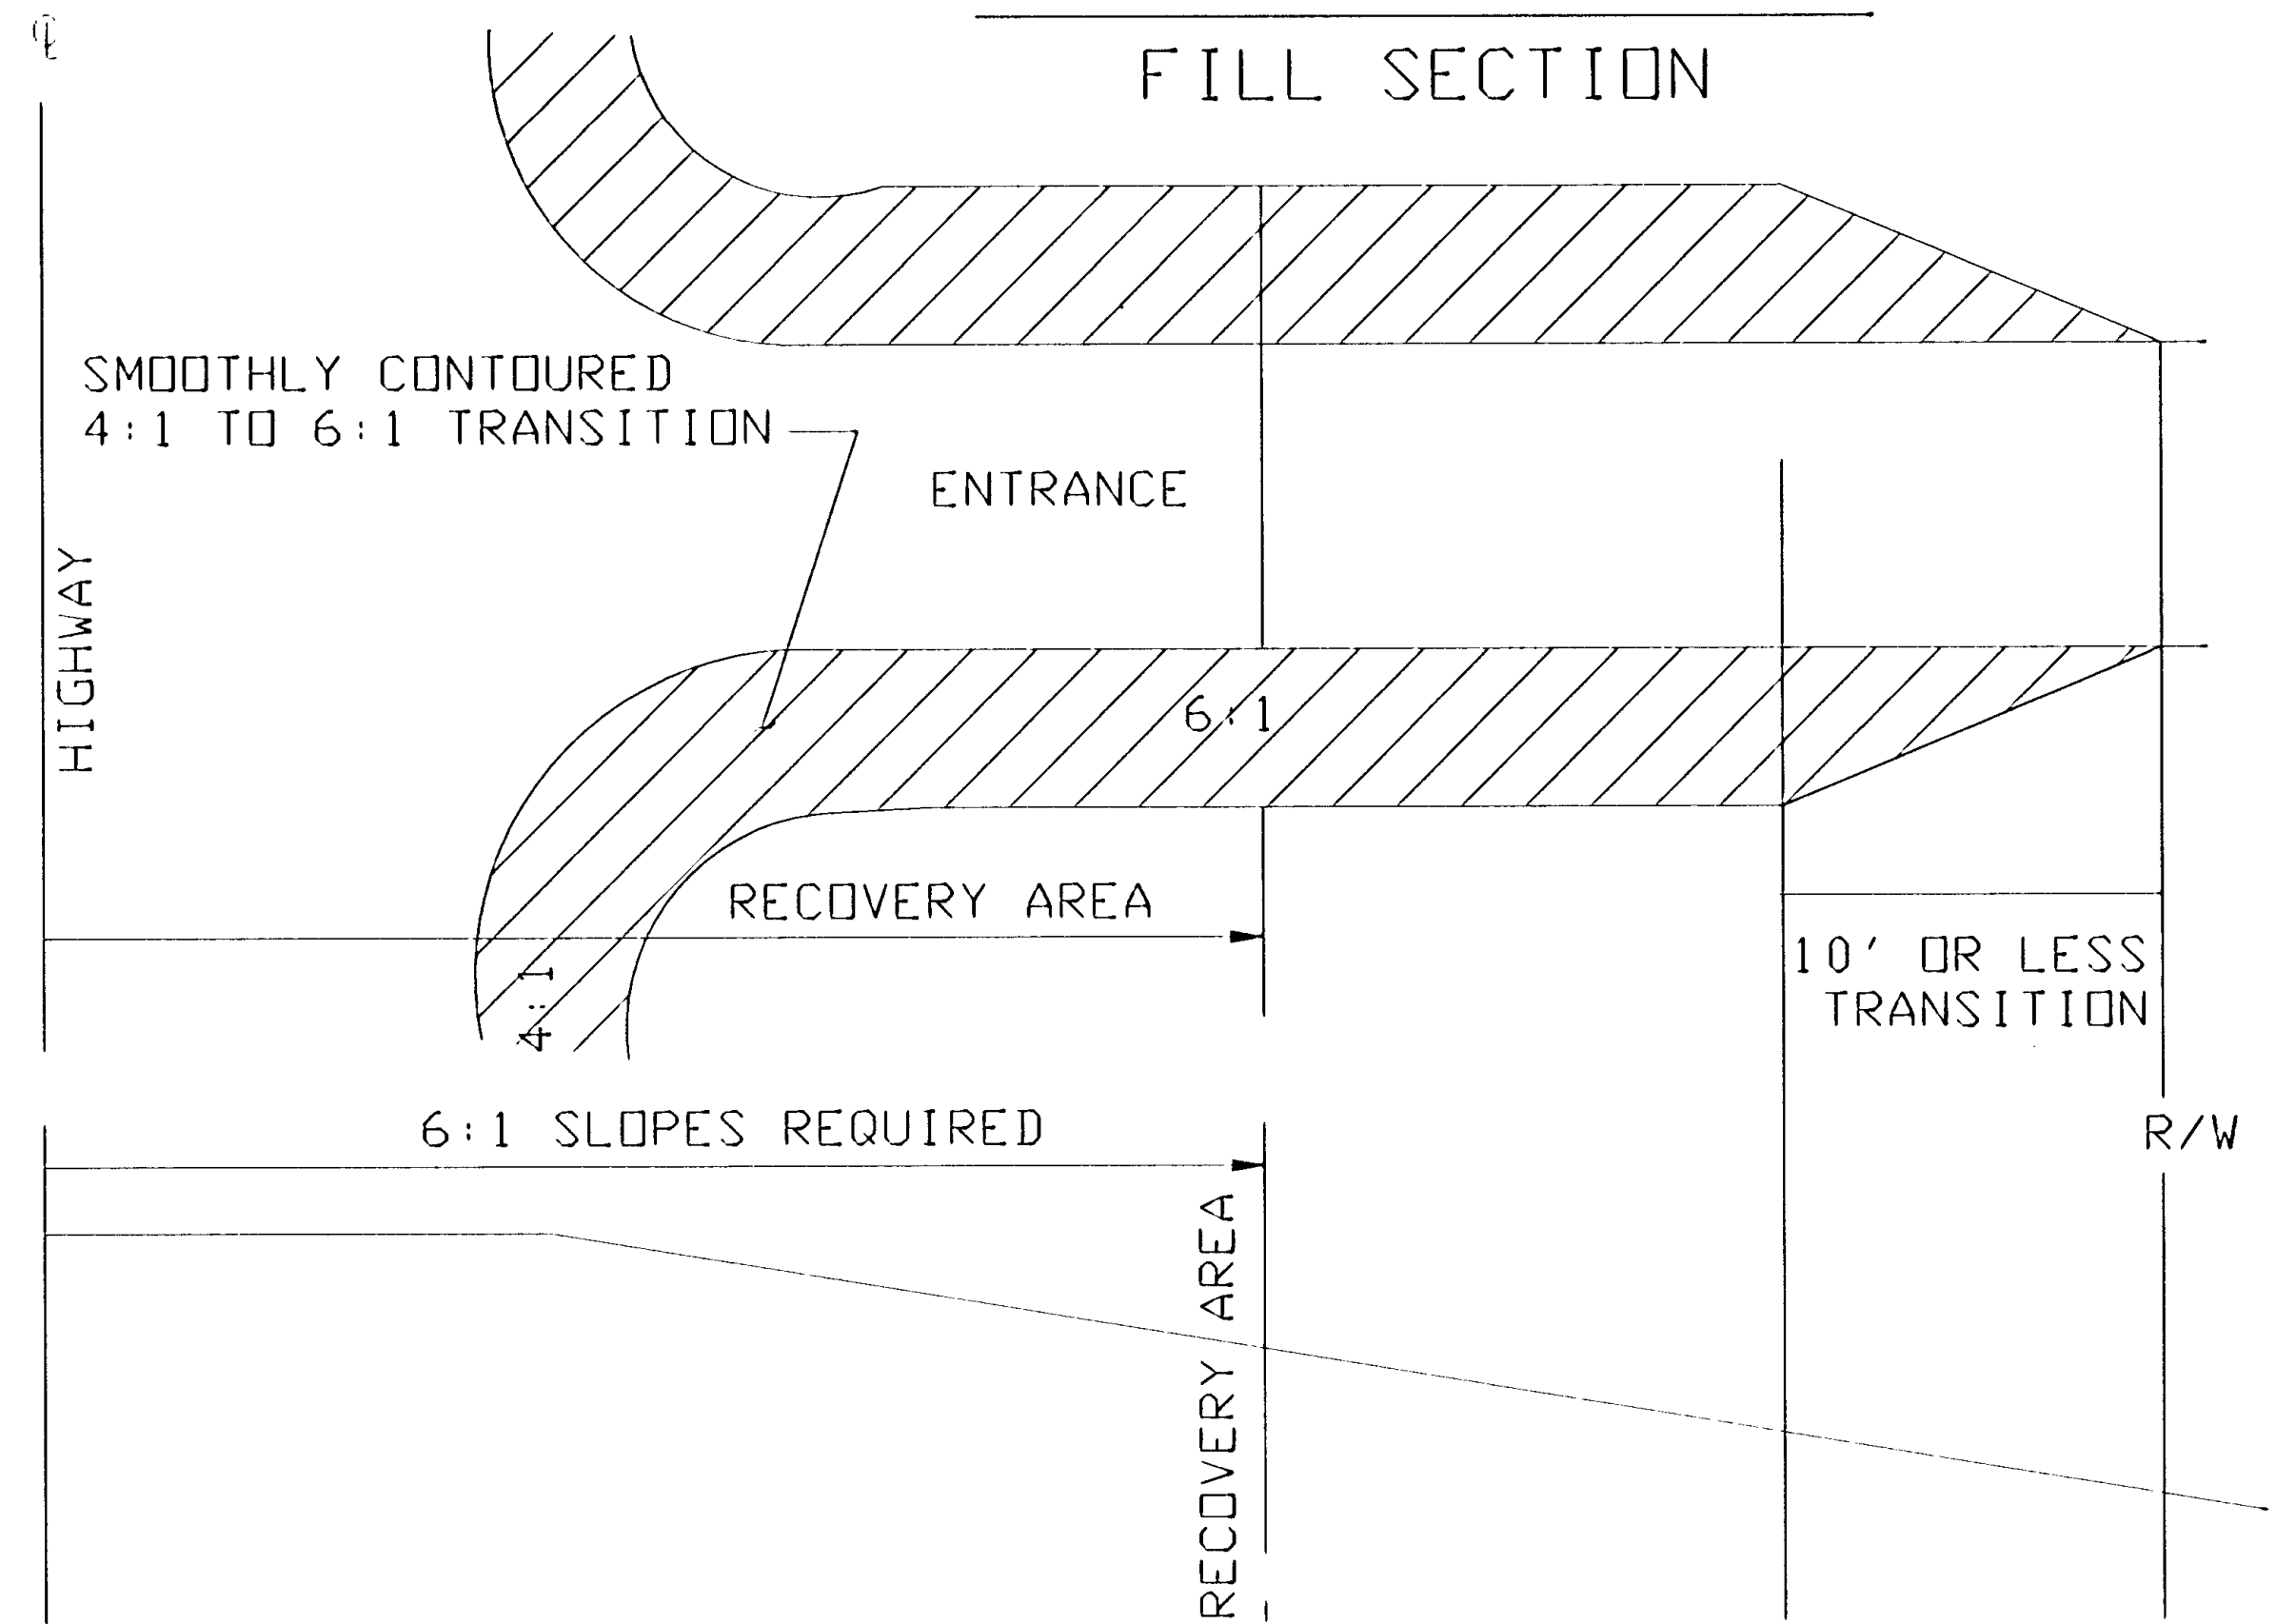

TYPICAL ENTRANCES


PAVED AND UNPAVED STREETS AND ENTRANCES

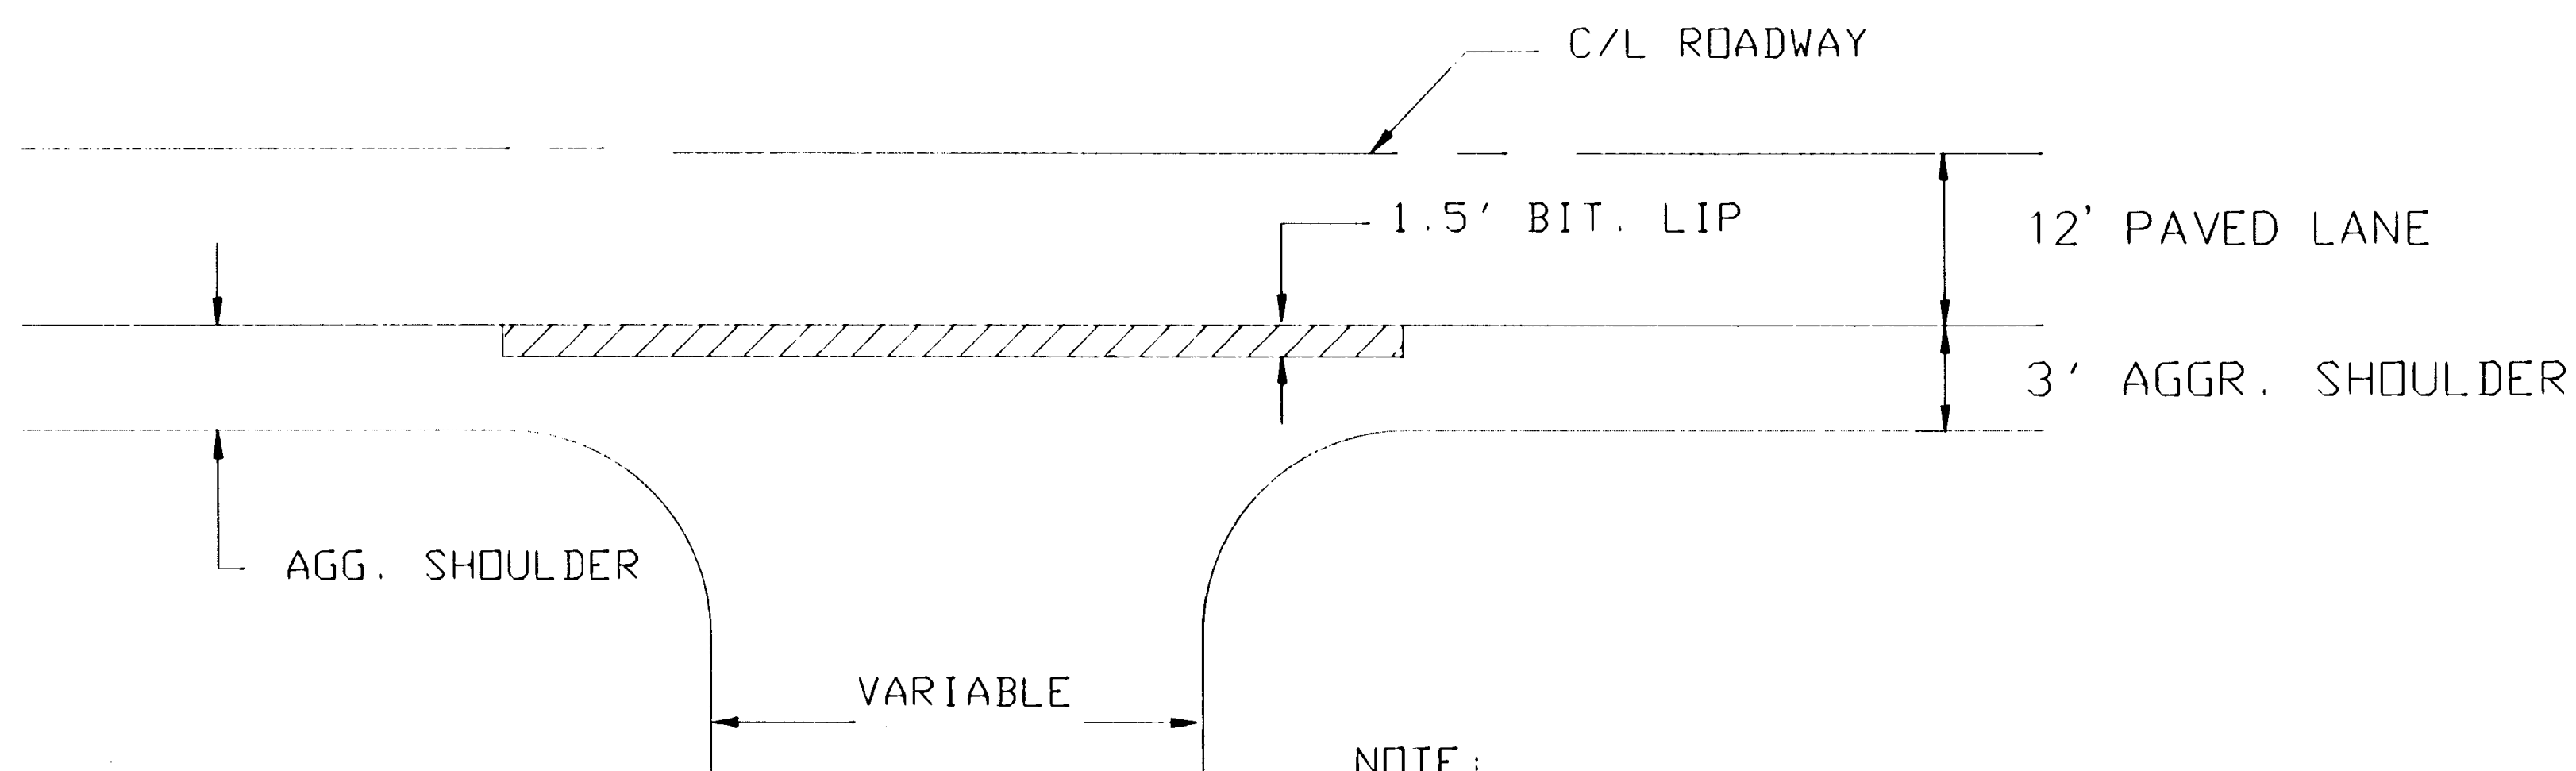

- NOTE:
- ON PAVED ENTRANCES TACK PAVEMENT & FEATHER BIT. TO BLEND WITH EXISTING DRIVEWAY.

NOTE: NOT TO SCALE

DITCH SECTION

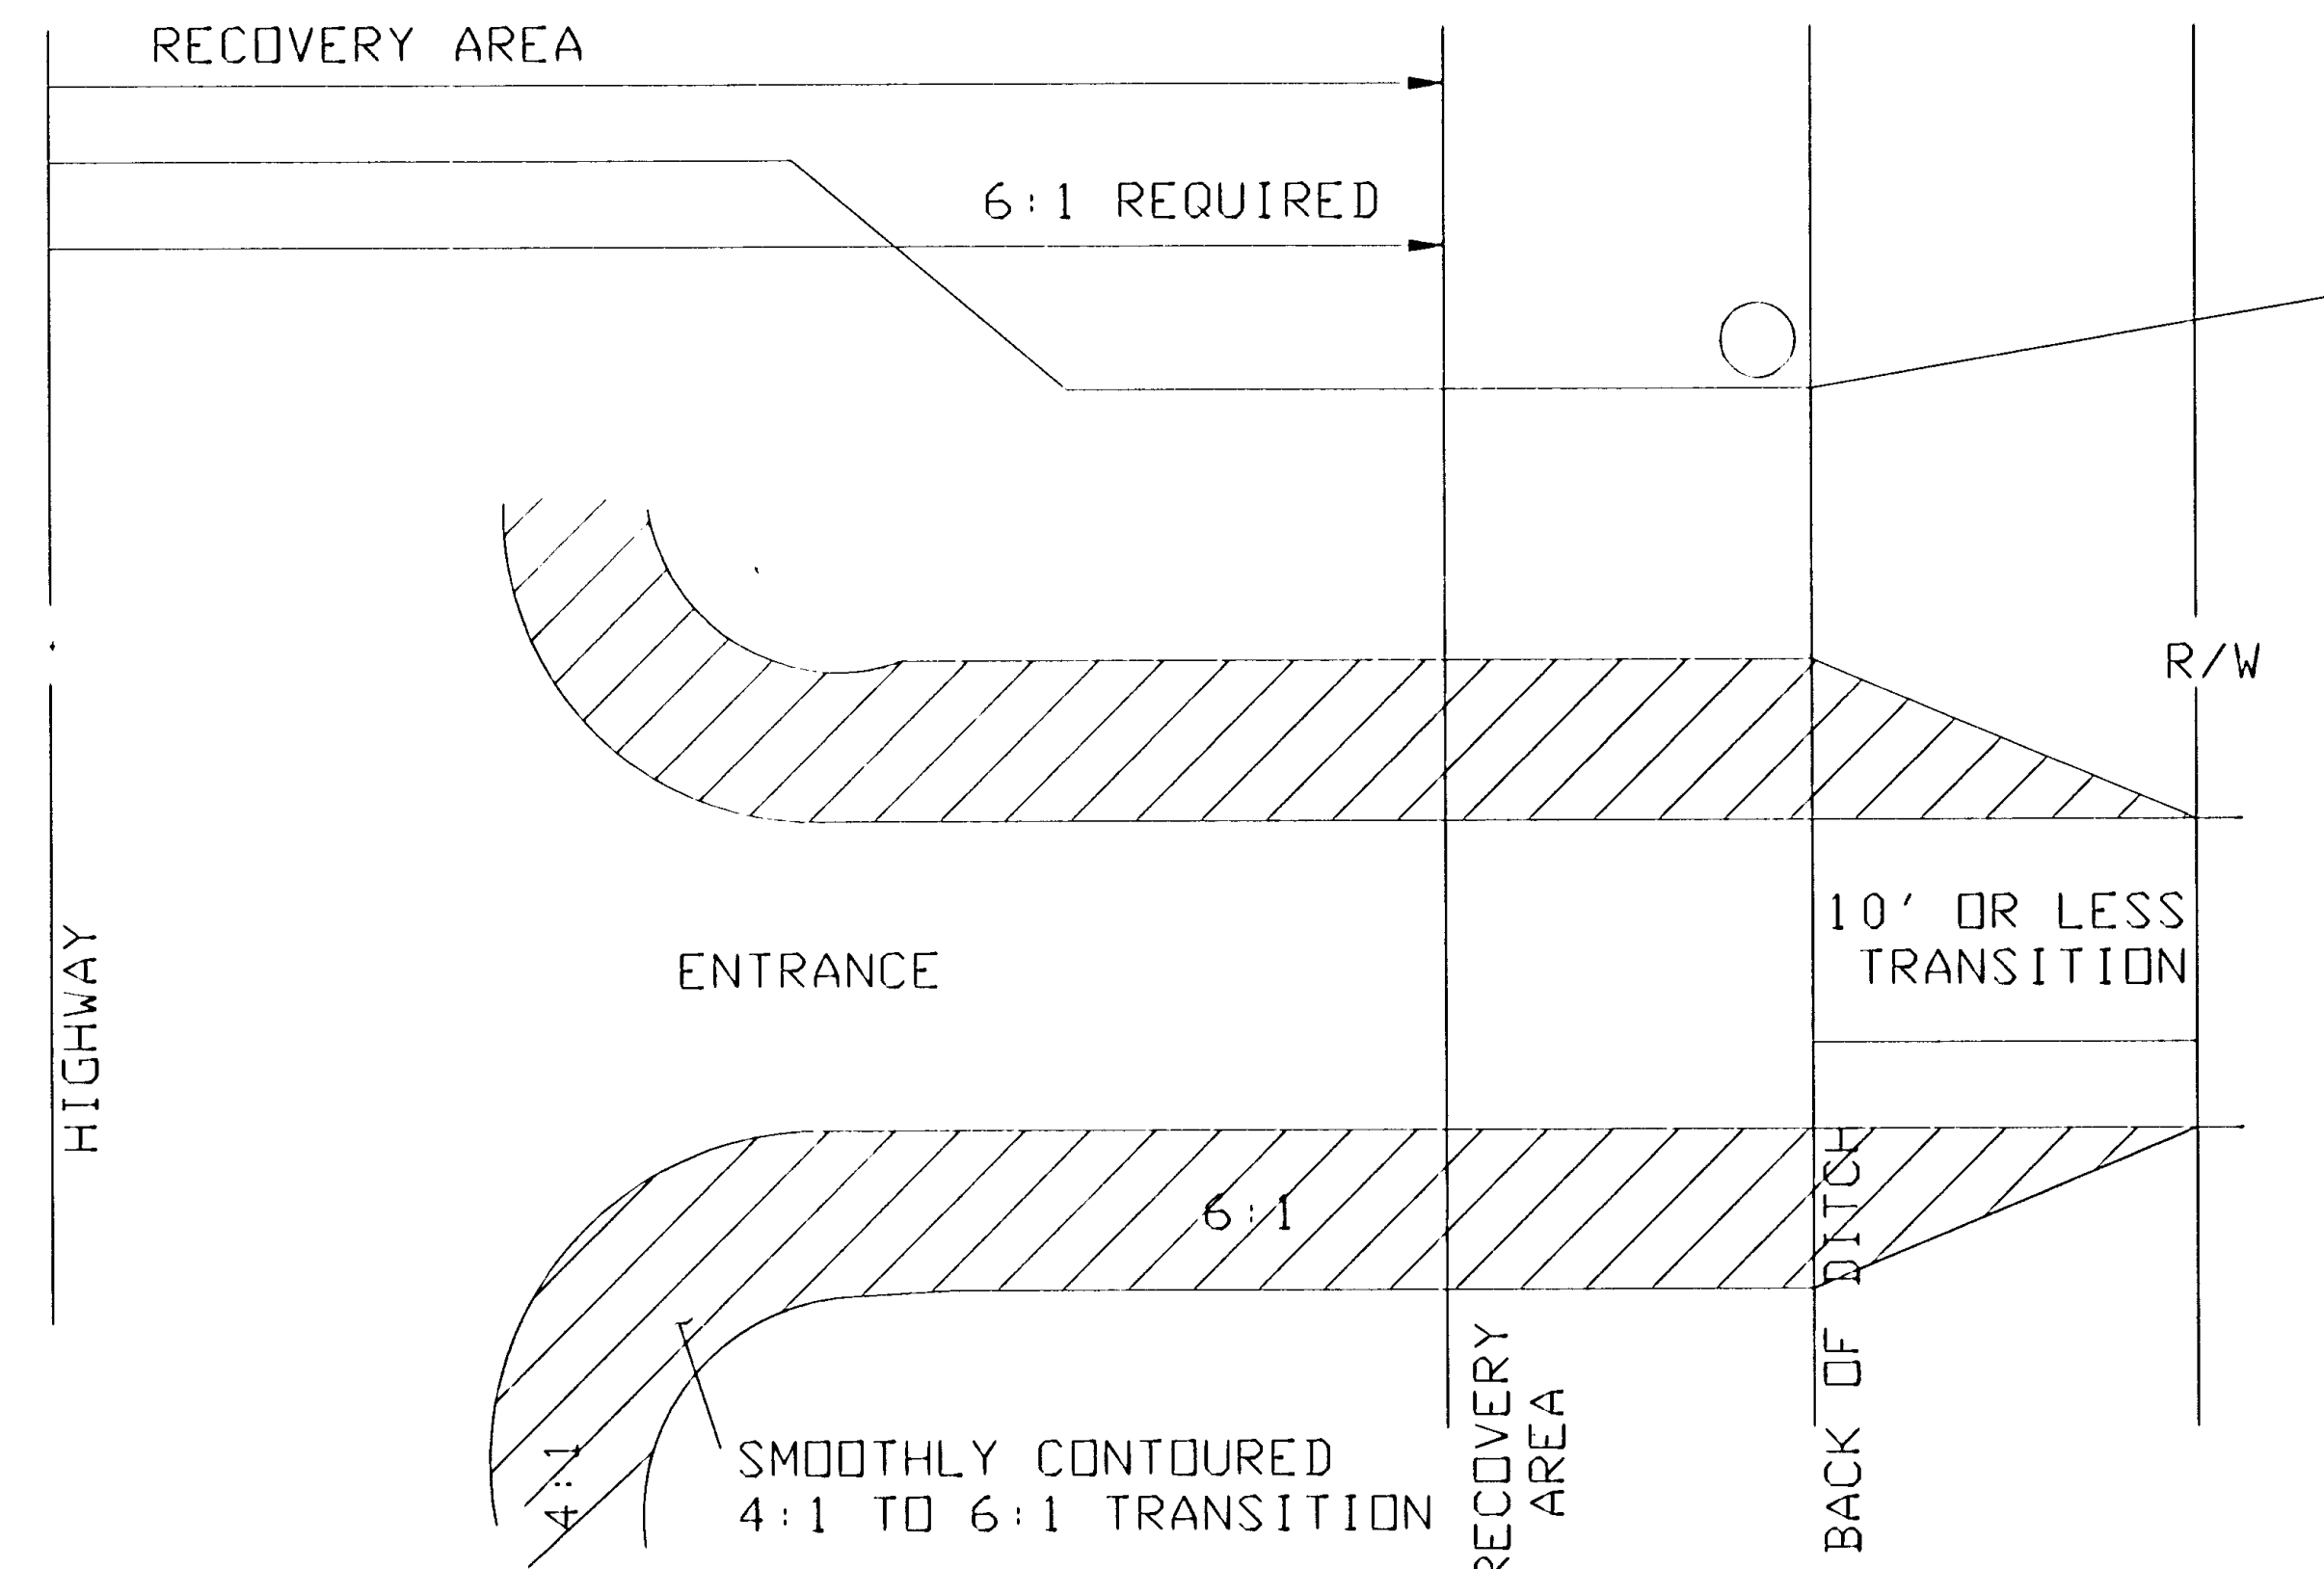

STANDARD DETAILS