


CENTERLINE CULVERT INSTALLATION

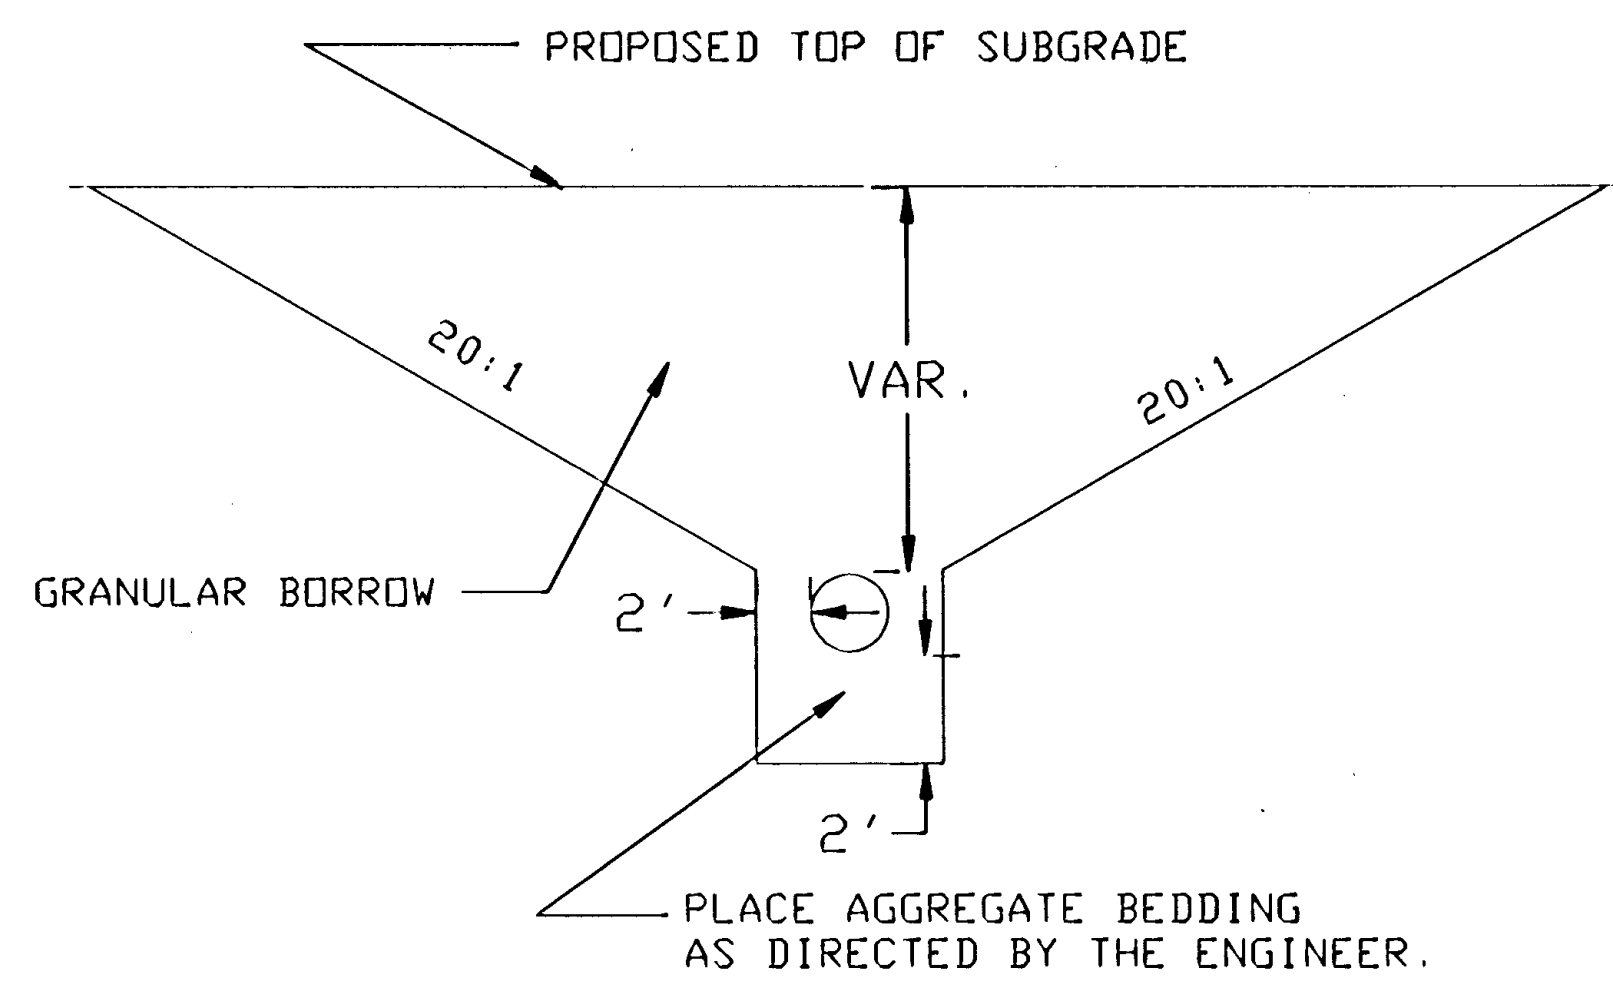


NOTES:

- * FILL AND COMPACT GRANULAR TO 4' ABOVE FLOWLINE BEFORE PLACING CULVERT.
- * AT CENTERLINE CULVERT LOCATIONS CULVERT EXCAVATION TO EXTEND 3' BEYOND END OF APRON.

TYPICAL ENTRANCES

PAVED AND UNPAVED STREETS AND ENTRANCES

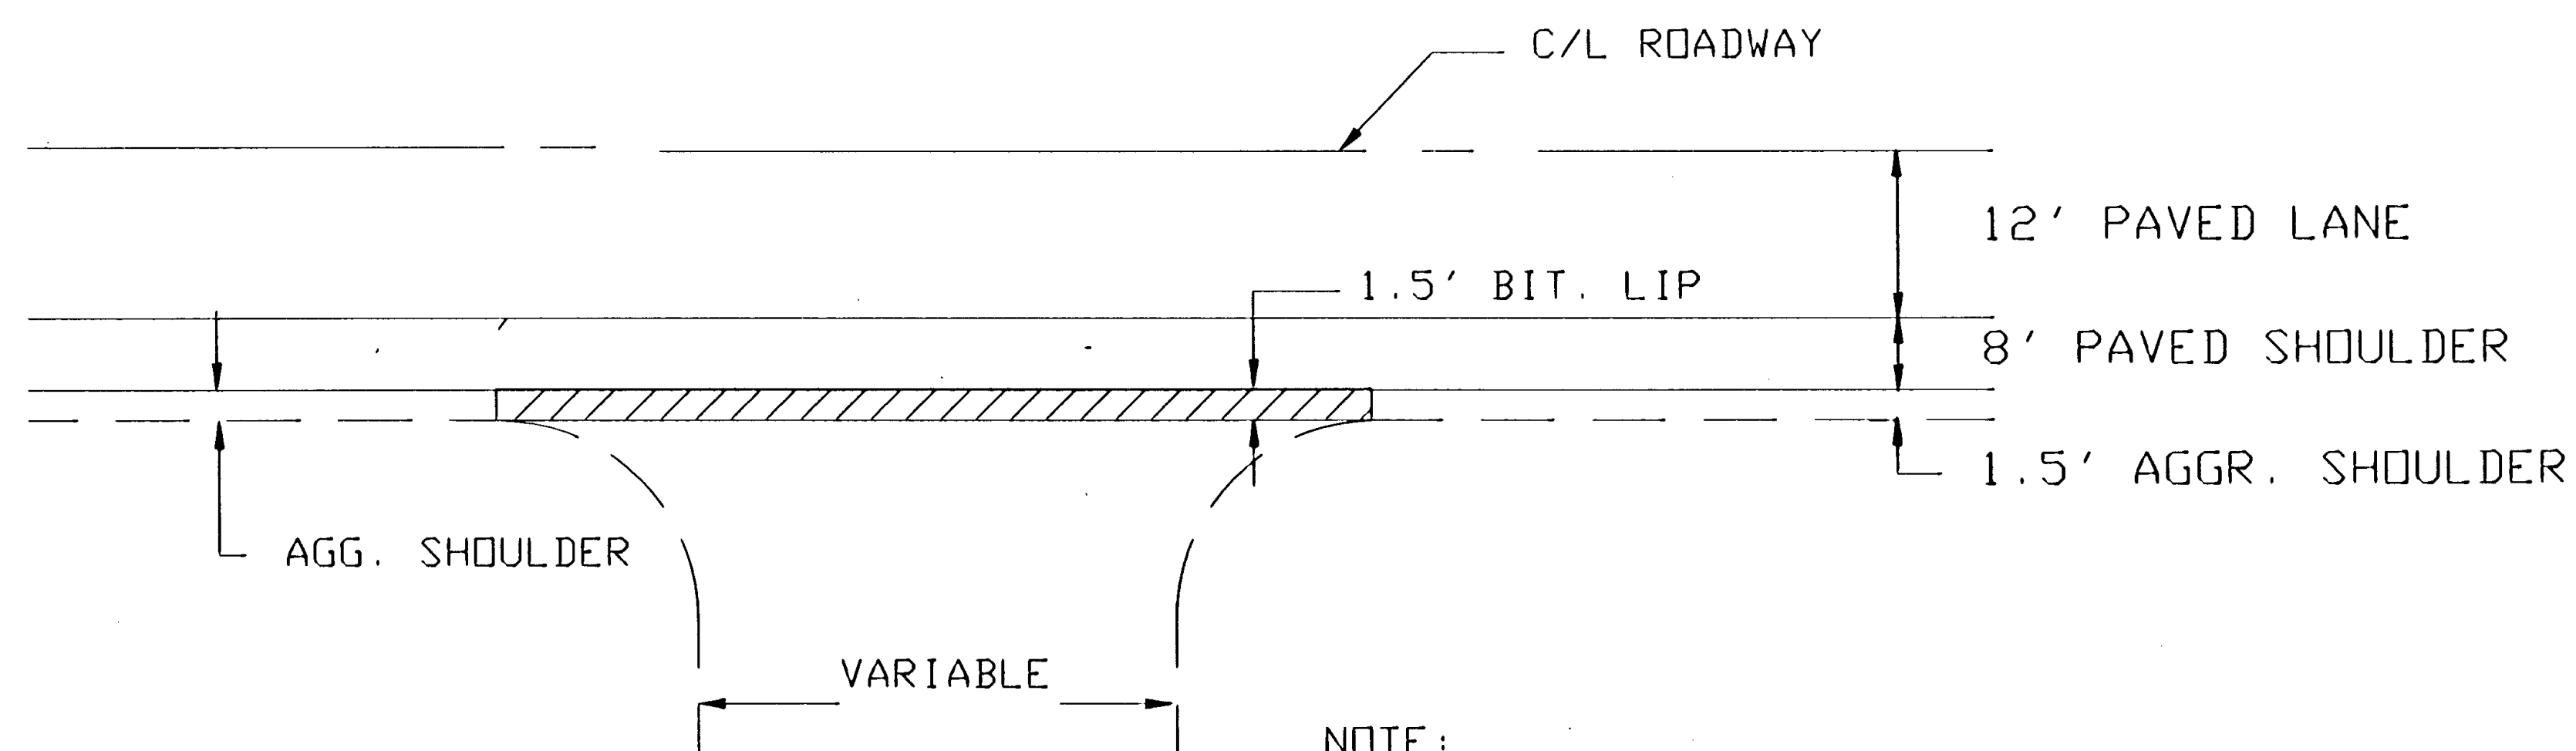


NOTE:

ON PAVED ENTRANCES TACK PAVEMENT & FEATHER BIT. TO BLEND WITH EXISTING DRIVEWAY.


NOTE: NOT TO SCALE

ENTRANCE SLOPES

FILL SECTION

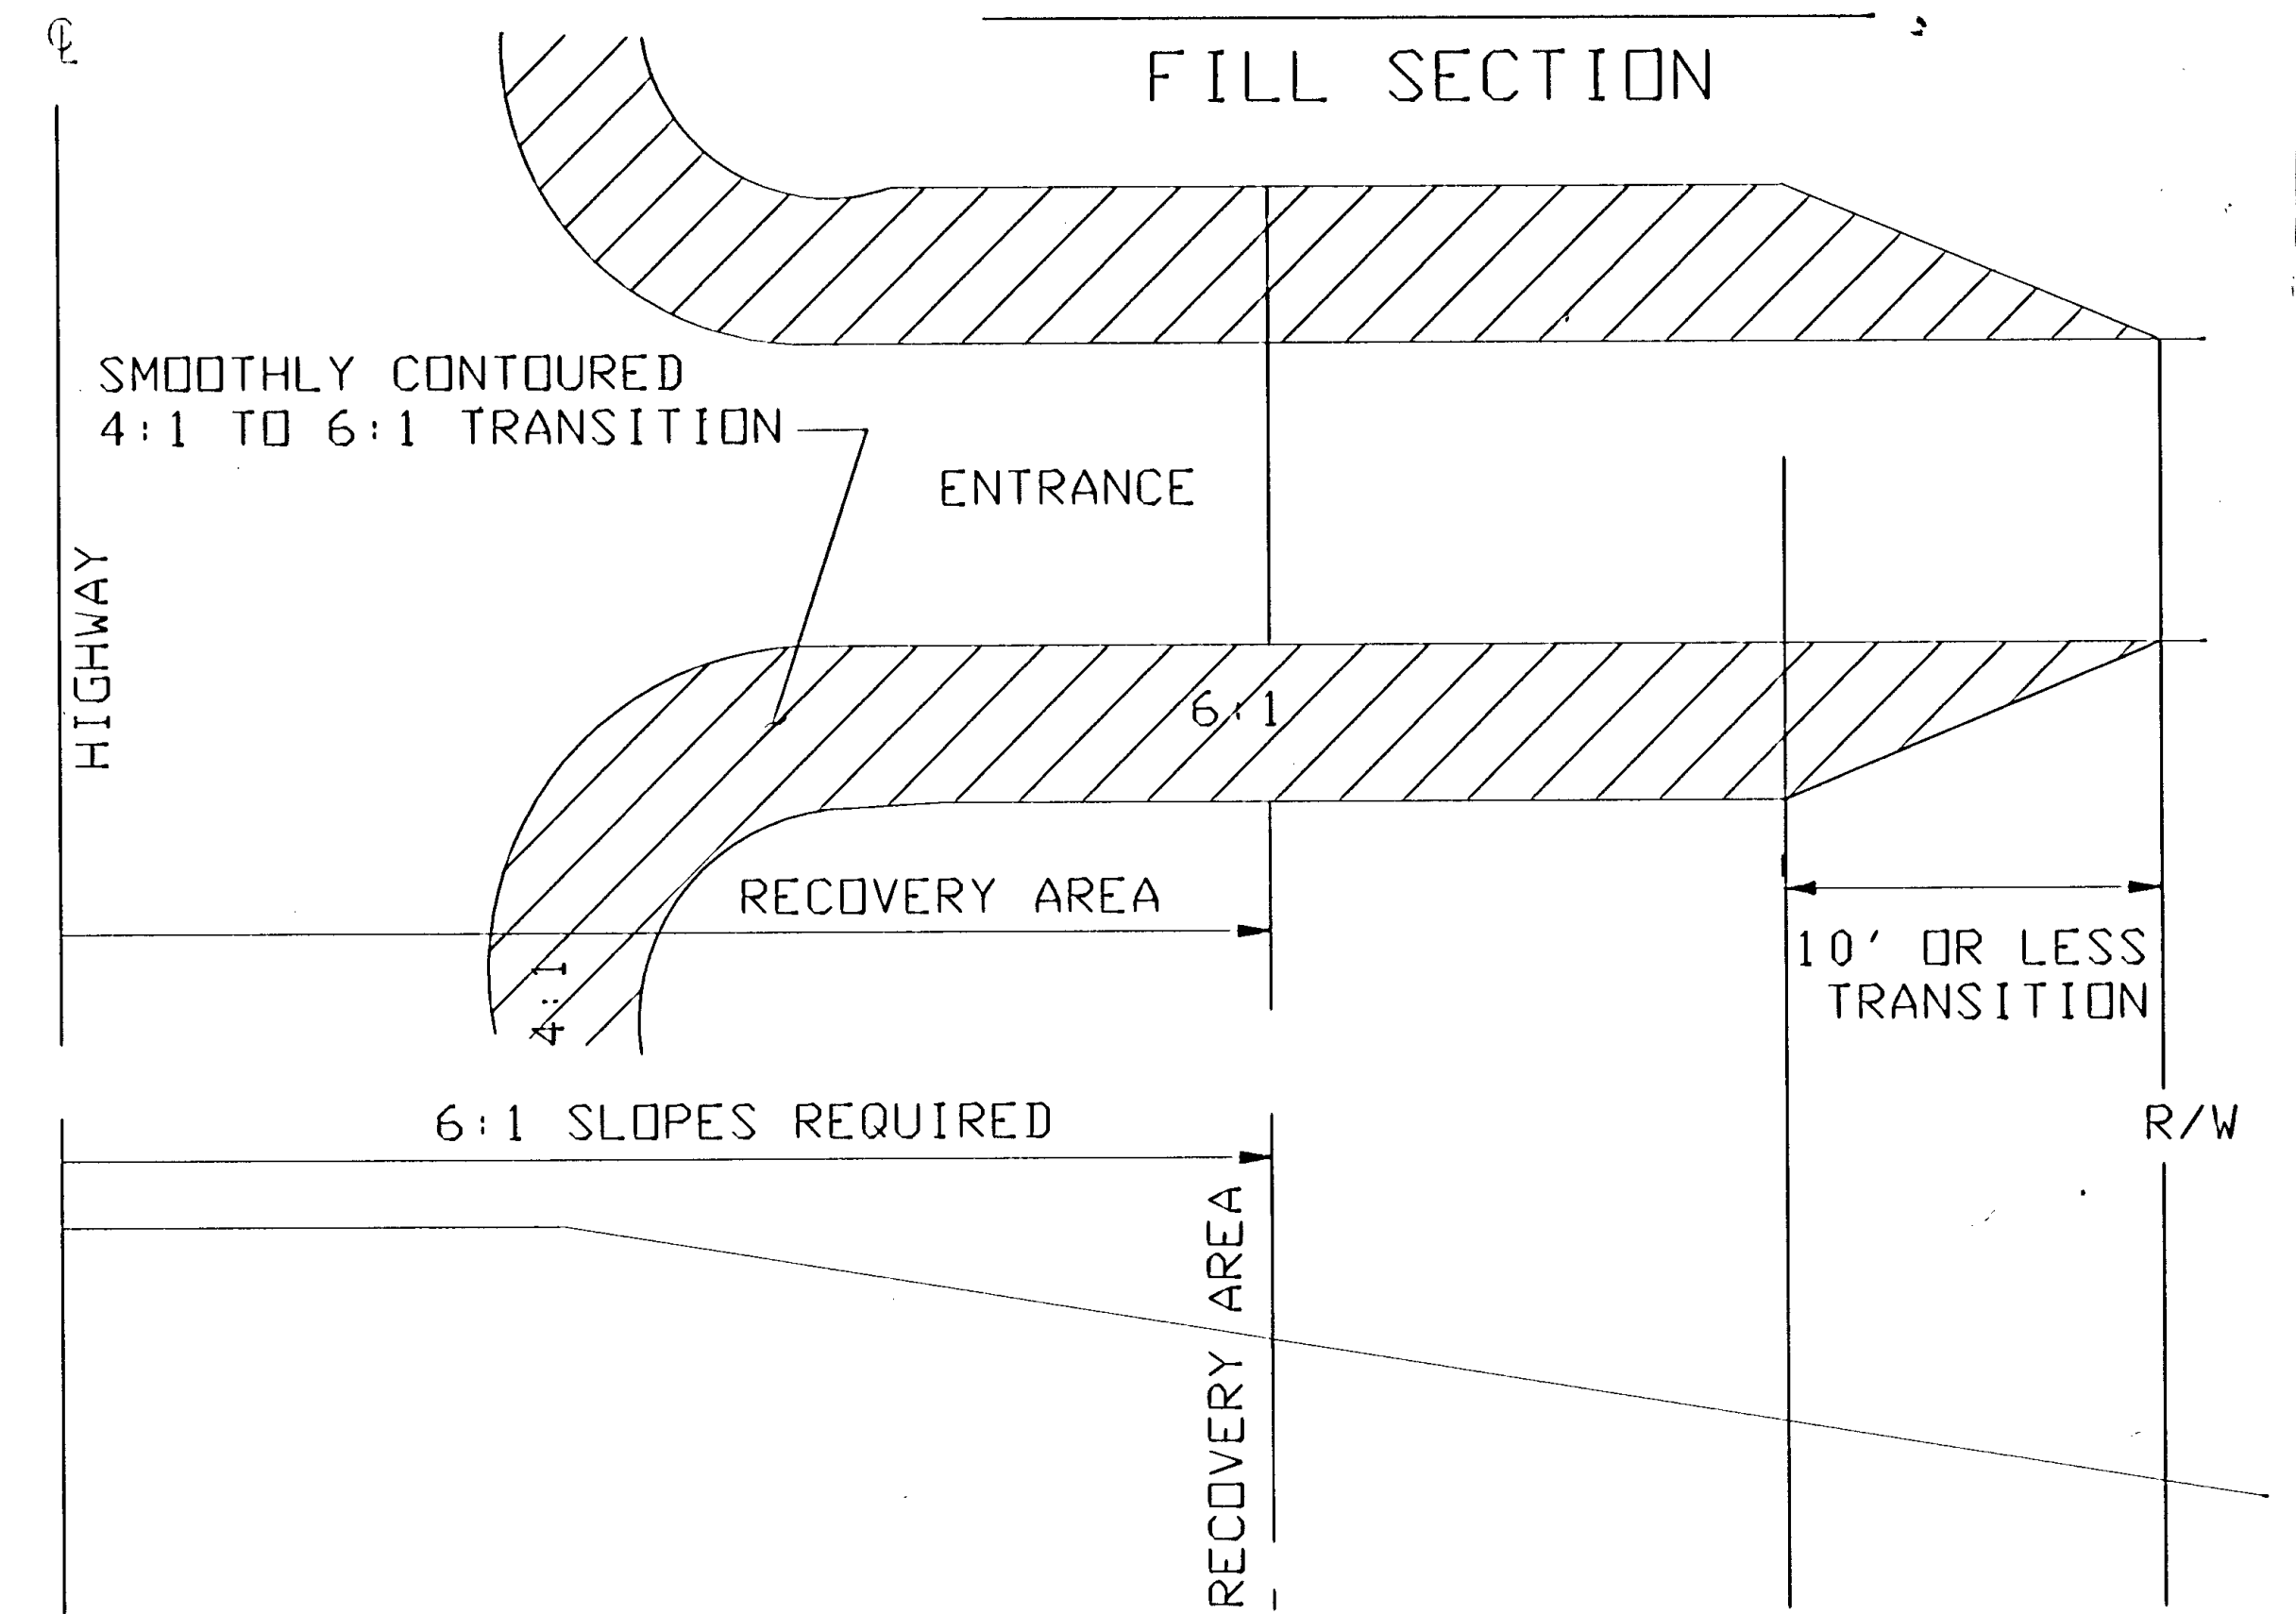

DITCH SECTION

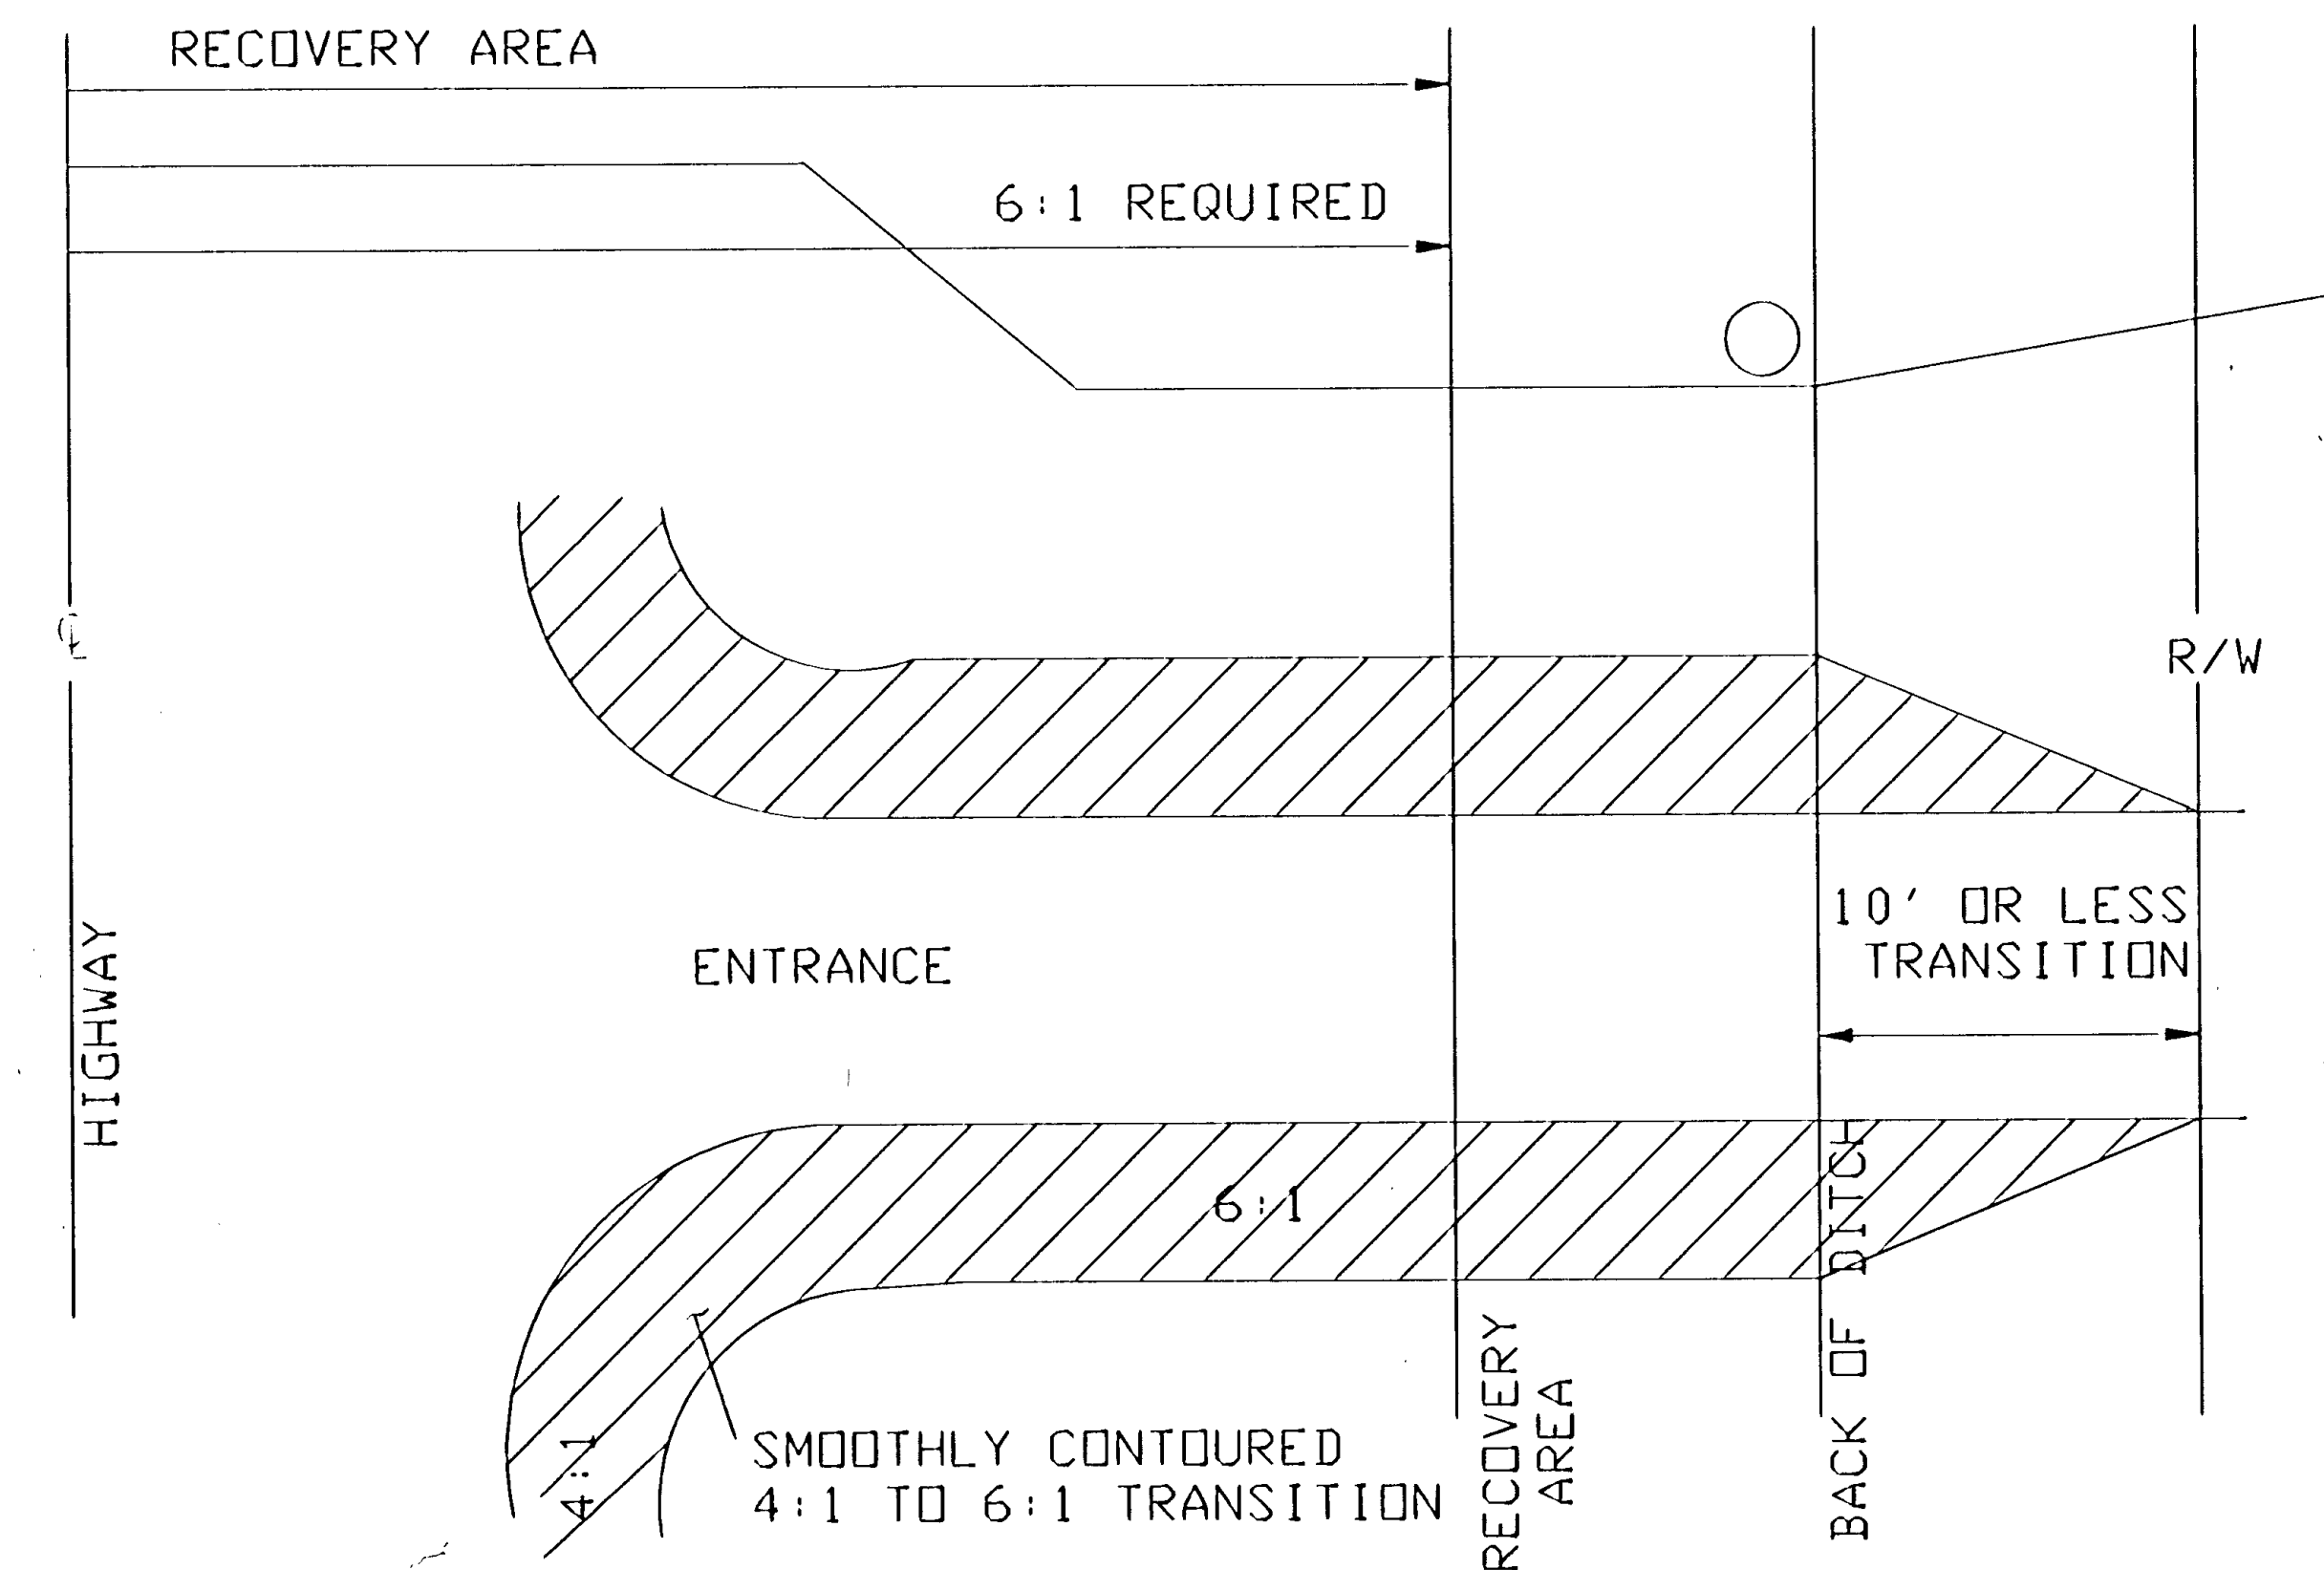

STANDARD DETAILS